



GS/COBRA75DS

TECHNICAL MANUAL

saelen.fr ts-industrie.eu

SAELEN® TS INDUSTRIE®

SOMMAIRE	
CONFIRMATION OF CONFORMITY	4
ATTENTION	5
GUARANTEE	6
INVENTION PATENT	7
PREFACE	8
LOCATION OF THE SERIAL NUMBER	9
SAFETY INFORMATION	10 - 12
PICTOGRAMS	13 - 15
SAFE TRANSPORTATION	16
GENERAL DESCRIPTION	17 - 19
OPERATION OF FEED ROLLER	20
TOWING A VEHICULE	21
CHECK BIFORE START	21
STARTING	22
INSTRUCTIONS DURING SHREDDING	23
STOPPING	24
BIO LUBRICANT	25
RECOMMENDED AND CAPACITY LUBRICANTS	26
MAINTENANCE INTERVALS	27
LUBRICATION POINTS	28 - 30
OIL LEVEL	31
TENSION OF THE METAL BELT	32
VERIFICATION BELT AND SLIDING PLATE	33
AIR INLETS OF THE ROTOR	33
DISASSEMBLY TO REPLACE BLADES AND HAMMER INSERTS	34 - 35
DISASSEMBLY TO CHECK THE COUNTERBLADES	36
ADJUSTMENT OF THE ROTOR BELTS	37
MAINTENANCE OF THE HYDRAULIC COUPLING	38
ADJUSTMENT OF THE BRAKES	39
ENGINE START SWITCH	40
PILOT SYSTEM	41 - 50
HYDRAULIC AND DIESEL TANKS	51
SAFETY CAPS	52
EMERGENCY STOPS	53
INDUCTIVE SENSOR AND FUSE	54
HYDRAULIC COUPLER	55
CO2 REDUCTION (option)	56 - 58
DISCHARGE CHUTE	59
GENERAL PROBLEM-SOLVING	60 - 61
PROBLEM-SOLVING CO2 RÉDUCTION (option)	62
SPECIFICATIONS	63
HYDRAULIC COUPLING	64
HYDRAULIC SCHEDULE	65
ELECTRICAL CIRCUIT MOTOR	66 - 68
ELECTRICAL CIRCUIT MACHINE	69 - 70

DECLARATION OF CONFORMITY

LA SOCIETE *TS industrie*

Weserstrasse 2
47506 NEUKIRCHEN-VLUYN

Tél : +49(0)2845 9292-0 - Fax : +49(0)2845 9292-28

HEREBY DECLARE THAT THE MACHINE:

Trade Name: **TS Industrie**

Type : GS/**COBRA75DS**

Engine performance: **56 kW**

Technical documentation held by Mathieu Willerval.

is in conformity with the following European Directives:

- **2006/42/EC** Directive „Machinery“
- **2004/108/EC** Directive „Electromagnetic compatibility“
- **97/68/EC** Directive „Emissions“
- **2000/14/EC** Directive „Noise emissions“


Conformity evaluation procedure concerning directive 2000/14/CE
Annex V.

<i>Power at 2600 rpm</i>	<i>Measured sound pressure level</i>	<i>Guaranteed sound pressure level (EVA)</i>
56 Kw	124 dBA	126 dBA

Reference of the applicable harmonised standards:

- **EN 13525/A2**

RONCHIN, June 02, 2014

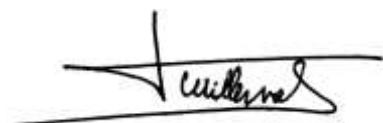

Mathieu Willerval (Production Manager TS Industrie)



Attention!

Before our machines are delivered they pass a tight quality control in the works.

Given that we no longer have a bearing on the machine after it leaves the works, the dealer has to perform another check before the delivery to the end customer.

The following is to be checked:

- Exterior damages produced by transport etc.
- Tight seat of all screw and hose connections
- Filling level of oil, water and fuel
- Complete functional control of all parts

This control is to be confirmed with stamp and signature on the **Machine Delivery Document**. If the fully completed and signed delivery document is not returned there is no right for warranty!

Furthermore, it is required to check all screw connections for tight seat and the laid hoses for marks of abrasion!

Agree a date for this directly with your customer.

Regular inspections according to the operating manual are to be met!

Controlled quality – an important step towards customer satisfaction!

Play your part!

Guarantees

Processing of warranty claims

Warranty claims according to the General Business Terms of the manufacturer are valid for the period of 1 year starting with the day of delivery.

Determinative for the moment of the transfer of risk is the date written in the **Machine Delivery Document**. As a matter of principle, warranty claims are to be announced to the supplying franchised dealer. For the preservation of evidence, all parts of the delivered machine covered by this have always to be stored unchanged until the final processing of the warranty claim brought to notice.

Technical modification at machines and/or parts thereof will result in loss of any and all right of warranty claims. The same is applicable in case of inappropriate treatment or use of lubricants and spare parts or accessories not approved by the manufacturer. Transport damages and damages caused by usual wear after commissioning of the machine do not create any warranty claims.

The delivered machine has to be subjected to the obligatory check and inspection intervals specified in the enclosed maintenance schedule. If the obligatory visual check and inspection schedule is not complied with, any and all warranty claims become void. Another requirement for a valid warranty claim is the presentation of a complete proof about the executed obligatory visual checks and inspections.

All warranty and maintenance works are only allowed to be carried out by a specialist dealer authorised by **TS Industrie**.

It is pointed out that warranty works exceeding an amount of 150.00 € is unconditionally to be agreed with **TS Industrie** and authorised by **TS Industrie**. In this case, the manufacturer reserves the right that he carries out the repair.

Prerequisite for the assertion of a warranty claim is the return of the fully completed and signed Machine Delivery Document.



Modifications on the equipment and programming of the electronic system are prohibited because these might have a negative effect on the operational safety and life time of the machine.

**DO NOT FORGET TO REGISTER THE WARRANTY,
OTHERWISE IT WILL BECOME VOID**

www.ts-industrie.eu



BREVET D'INVENTION

Code de la propriété intellectuelle-Livres VI

DECISION DE DELIVRANCE

Le Directeur général de l'Institut national de la propriété industrielle décide que le brevet d'invention n° 00 00 00 00 dont le texte est ci-annexé est délivré à : **SAELEN S.N.S. Société anonyme - FR**

La délivrance produit ses effets pour une période de vingt ans à compter de la date de dépôt de la demande, sous réserve du paiement des redevances annuelles.

PATENT FOR INVENTION

Intellectual property law-Books VI

GRANTING DECISION

The General Manager of the National Institute of industrial property has decided that invention patent # ##-#### the text of which is appended shall be delivered to: **SAELEN S.N.S. Company - FR**

The delivery produces its effects for a period of twenty years starting on the date of deposit of the application, under reserve of payment of the annual royalties.

Mention of the delivery is made in the Official Bulletin of industrial property #### of #### (publication # # ####).

Le Directeur général de l'Institut
national de la propriété industrielle

D. HANGARD

INSTITUT
NATIONAL DE
LA PROPRIETE
INDUSTRIELLE

SIEGE

26 bis, rue de Saint Petersburg
75800 PARIS cedex 08
Téléphone : 01 53 04 53 04
Télécopie : 01 42 93 59 30

ETABLISSEMENT PUBLIC NATIONAL

ORSE PAR LA LOI N° 51-444 DU 19 AVRIL 1951

Preface

We thank you very much for deciding to purchase an universal chipper from **TS Industrie**. Your universal chipper was manufactured with utmost care and high quality standards. In order to meet these requirements also for the mostly professional applications, we kindly ask you to diligently read this operating manual and to comply especially with the warning and maintenance information. Only if complying with all maintenance works within the specified maintenance intervals we can concede the full manufacturer's warranty for your universal chipper from **TS Industrie**.

The operating manual includes several models such that in the introduction is explained how to orient yourself with the help of small pictographs.



Location of the serial number

For any spare parts order or a question regarding technical information have always the serial number of your COBRA 75 at hand.

Manufacturer's type plate



The serial number is located as shown in the image. It does always have **five- or six-digit number**.

Do not state the number from the type plate of the trailer.

Serial number





Safety instructions

- 1.** The machine is only allowed to be used according to the operating manual!
- 2.** In case of machines with engine also the operating instructions of the engine are to be observed.
- 3.** Folding the intake extension up (as far as present) is only allowed after standstill of the rotor.
- 4.** Maintenance, cleaning and setting works as well as the removal of protective devices are only allowed after the engine is shut down, the ignition switched off, the drive decoupled and the tools immobile. Remove the ignition key such that unintended start is impossible.
- 5.** Prior to operation it is required to remove foreign matters, e.g. ferrous parts, stones etc.
- 6.** After maintenance or repair it is to be checked if all protective devices are mounted.
- 7.** The wood chipper is not allowed to be operated in closed spaces because of the risk of intoxication.
- 8.** The rotor must not be uncovered before it has reached standstill. That is to say, the propulsion engine (tractor) is parked and the ignition is in 0-position.
- 9.** The machine operator is responsible that no third persons are staying in the working and danger area.
- 10.** For repairs it is to be observed to use approved original spare parts only.
- 11.** Only persons of over 18 years are allowed to operate the wood chipper.
- 12.** Safety shoes and tight fitting clothes, work gloves with tight gauntlets as well as ear protection and goggles are to be used.

13. For transporting the wood chipper it must be moved into transport position.
- A) Fold the hopper (as far as present) up and check if the locking device is engaged.
 - B) Move the wood chipper into transport position and check if the safety pin has engaged.
 - C) Turn the ejection channel such that it does not jut laterally out over the machine.
 - D) If necessary lift all parking sustainers.

14. When driving on public roads the lighting must correspond to the Highway Code.

15. For work, the wood chipper must be parked stable.

16.

a) Single-axle machines with engine are attached to tractor vehicles, and the parking brake is applied as far as present.

In case of machines without brakes it is required to push the supplied chocks under the wheels.

b) For operation without tractor vehicle it is required to lower the parking sustainers (front and rear).

17. For safety reasons a minimum distance of 10 metres should be kept from the machine.

The expulsion must always be directed away from the operating personnel.

18. Only after the engine is shut off and the rotor is standing still, it is allowed to reach with the hands into the infeed mouth.


19. The admissible hydraulic operating pressure set ex works is not allowed to be changed.

20. Only trunks up to a diameter of 16 cm are allowed to be processed.

21. The hydraulic system is to be competently checked every year. The hydraulic hoses are to be replaced after 5 years.

22. During feed of the wood chipper do not reach into the feed hopper. Congestions are to be removed in a safe manner (shut the engine down, use an aid). For pushing in short pieces or shrubby material do only use solid wooden rods or other aids made of wood. Our wood chippers are designed only for manual feed. Do not use mechanical resources (gripper) for feeding the machine.

Do not move in the area of the expulsion.



23. Carry out an functional check every day before starting the machine, especially of the safety equipment (**trailer coupling**, gear linkage, shifting block, cut-off switch on the hoods in case of the M version etc.). Chipping knives and counter-knives are also to be checked for proper functioning and tight seat.

24. Prior to starting the machine the operator must be trained in detail.

25. The rotor must not be uncovered before standstill and the engine is switched off.

26. Danger because of flying off pieces. It is to be observed that also in the operating range pieces such as wood chips might fly out of the hopper area. Body protection is always to be used. Operation is to be carried out lateral of the hopper.

27. Note for all machines with engine:

The inclination of the engine during operation (driving) must amount to max. 25°. In case of reduced oil level the lubrication of the engine is not ensured even at 25°!

28. Caution when parking the machine on a slope. The machine operator has to ensure that the machine is safely stationed for the time of the work.

29. After connecting the machine to the tractor vehicle, remove and store the support wheel.

30. The machine must only be fed with wood. Ensure that no stones or metal objects enter the machine.

31. The machine must not be used for transporting material or persons.

32. The machine must not be used for pushing or towing.

33. Battery acid is a caustic fluid. Therefore any contact with eyes, skin and clothes must be avoided. In case of contact rinse all affected areas with water and go see a doctor, if required.

34. Always disconnect the battery before any work on the electric installation.

35. Only **trained personnel** is authorised to carry out these works. The execution of all installation and removal works as well as special maintenance works is reserved for an authorised specialist dealer.

36. Pay attention that you are not drawn into the infeed roller with the clothes.

37. Regularly clean the lateral skirt such that it remains transparent.

Pictographs

Wear eye and ear protection!



Use protective gloves with specially tight gauntlets!



Wear safety shoes!



Do only touch machine parts after they are at a complete standstill!



Keep sufficient distance to rotating machine parts!



Pictographs

While the drive is running never open and remove protective devices!



Read the operating manual before start-up!



Do not stay in the area of the expulsion if the machine is running! Hazard area!



Shut down the engine and remove the key prior to any maintenance and repair work!



Caution! Entanglement.

Never reach into the infeed hopper while the engine is running.




Fill the fuel tank with **diesel**.




The machine is operated with hydraulic oil HV46.

HYDRAULIC

Lubrication points

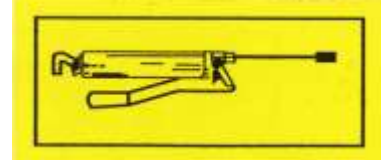

The sound level of the working machine is not the value of the standard level on the sticker.

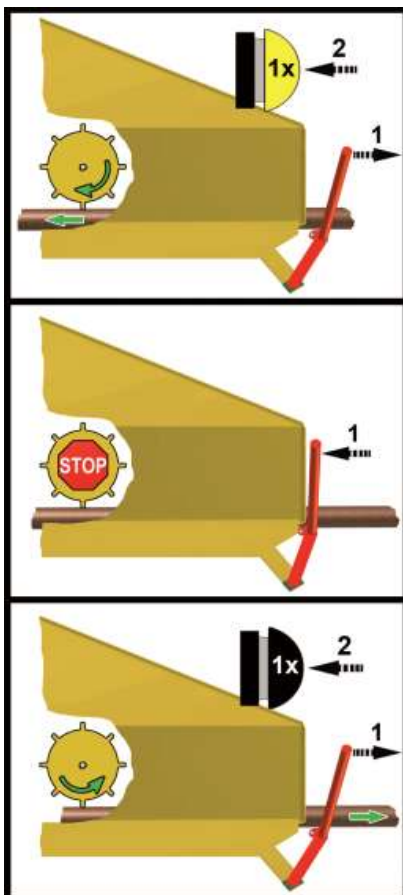

Moving direction commands for the conveyor belt

Material chipping (forward **max. speed**)

Stopping rotation of the infeed rollers


Loosening material (backwards)

Safe transport


- 1) Observe the valid Highway Code.
- 2) Ensure that the machine is always fitted with signal lights, which are clean and visible for other road users.
- 3) Reduce speed when driving on rural roads and unlevel routes.
- 4) Remove all remaining material from the hopper.
- 5) Turn the expulsion chimney completely to the front and fold the expulsion hatch completely down.

Coupling wear indication:

Check the wear indication each time the machine is hooked up to the tractor vehicle. Acquire the habit to replace the coupling dog and / or coupling ball of the vehicle as soon as the wear indication hits the negative area, such that you cannot loose the chipper when driving on rough roads or driving against a kerb when reversing.

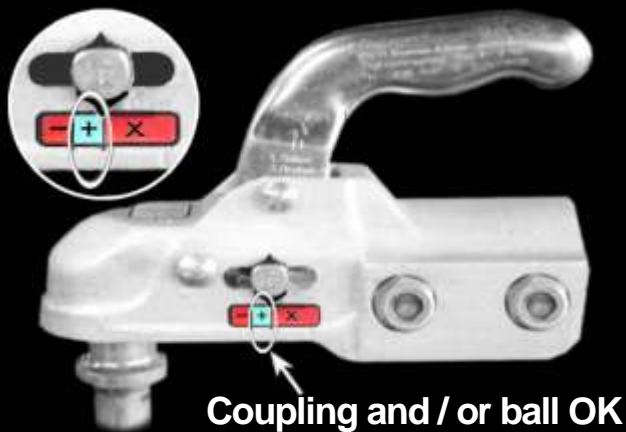



Coupling and / or ball OK

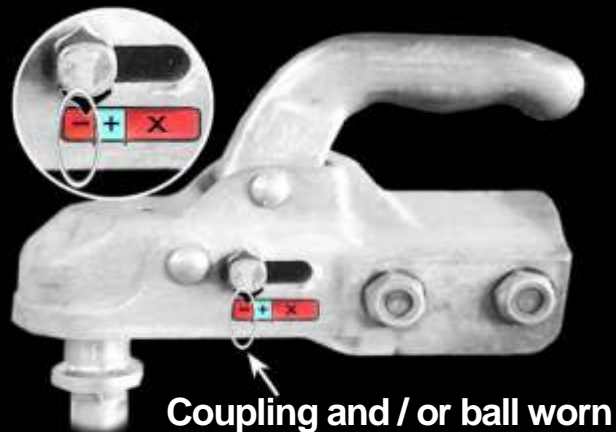

Coupling and / or ball worn

Coupling to a vehicle:

The chipper should always be coupled in horizontal position such that the machine is prevented from tilting backwards **AND** check every day that the drawbar adjusting devices are secured to prevent jerky movements, which damage coupling and towing device and reduce the life span.

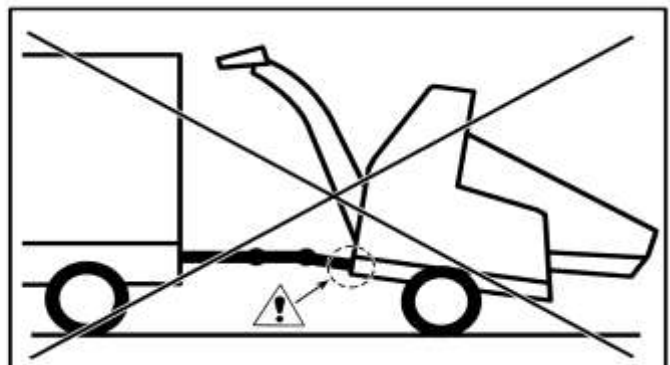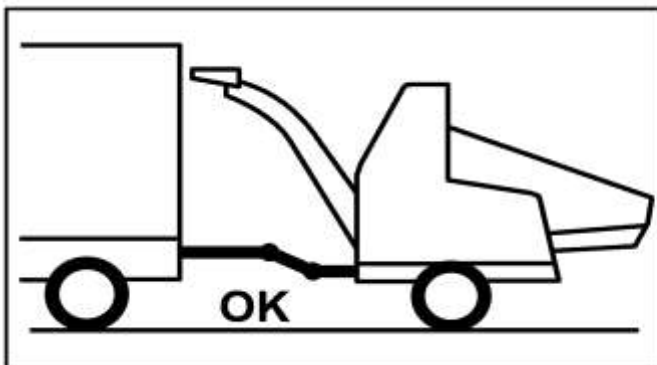


General description and functions

DESCRIPTION OF THE MACHINE

The chipper COBRA75 TS Industrie is designed for chipping branches up to a **diameter of 7,87 inches**.

The machine consists of the following main components:

- (A) : Frame
- (B) : Chipping unit
- (C) : Engine and drives
- (D) : Expulsion chimney
- (E) : Noise insulation hoods
- (F) : Conveyor metallic belt

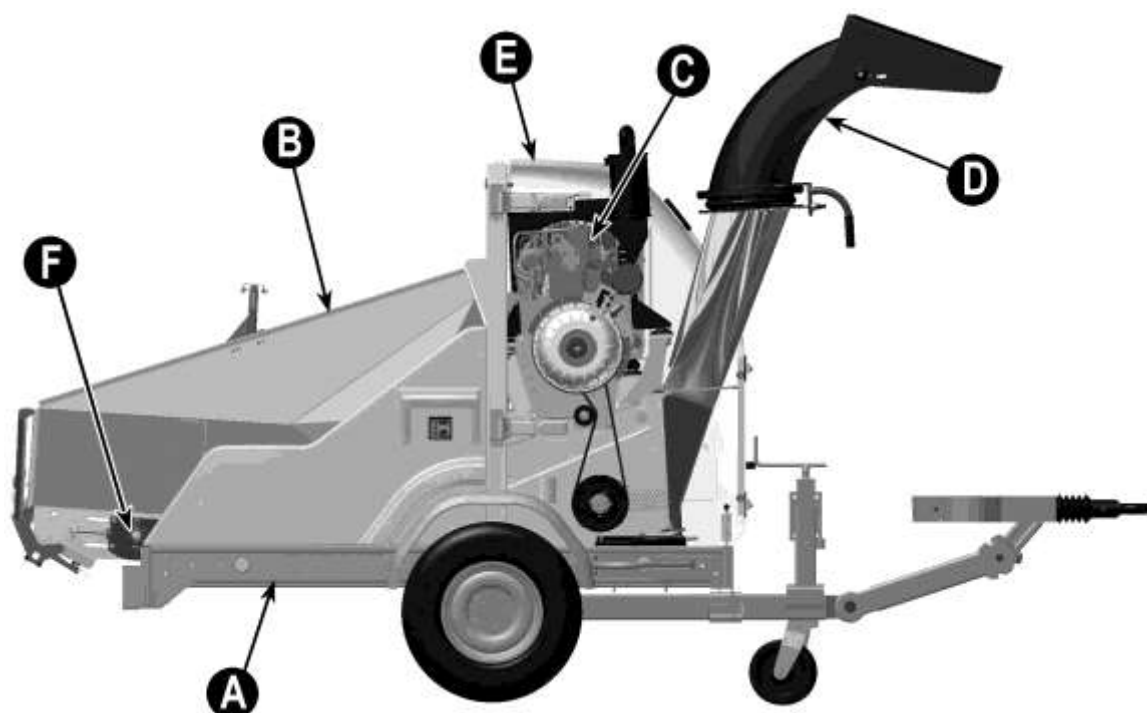

General description and functions

A. Frame

The frame is used for allocating the different components of the chipper COBRA and allows an independent movement of the machine.

B. Chipping unit

The unit consists of one infeed hopper (1), one conveyor belt (2), one infeed roller (3) and one rotor.

Conveyor belt and infeed roller:

They transport the chipping material at constant speed in direction rotor. An anti-blocking system disconnects the infeed if the speed of the rotor falls below the minimum speed (chipping unit jammed) and automatically connects again after the speed of the rotor is sufficient for correct chipping work.

The infeed can turn into both directions (forward and backwards) when using the yellow and the black button (4) located on the left side of the infeed hopper.

The speed of rotation can be matched to the diameter of the material to be chipped using the regulating screw (4) on the left side of the rear hood.



Rotor:

The rotor is the main component of the machine and has the task to chip the material coming from the infeed roller. After the engine accelerates, the rotor connects and rotates at a constant speed.



General description and functions

C. Engine and drives

The diesel engine is located above the chipping unit. It supplies the required energy for the drive of the rotor and the hydraulic oil pump (1).

The machine is driven by a 3-cylinder diesel engine with an output of 75 HP at 2600 rpm. Further information regarding the engine can be taken from the manual of the manufacturer.

The rotor is driven via the output shaft, the centrifugal clutch with belt pulley (2) and 5 V-belts. The hydraulic pump is connected to the diesel engine and drives the hydraulic motors of the infeed rollers.




D. Expulsion channel

This expulsion channel expulses the chipped material. The upper part can be swivelled by 180° in horizontale position. The expulsion hatch can be adjusted in vertical position.



Caution:
When connecting the wood chipper residual chips can be expulsed.

Two electric switches disconnects the engine and prevents a re-start if the expulsion chimney is open towards the rotor.

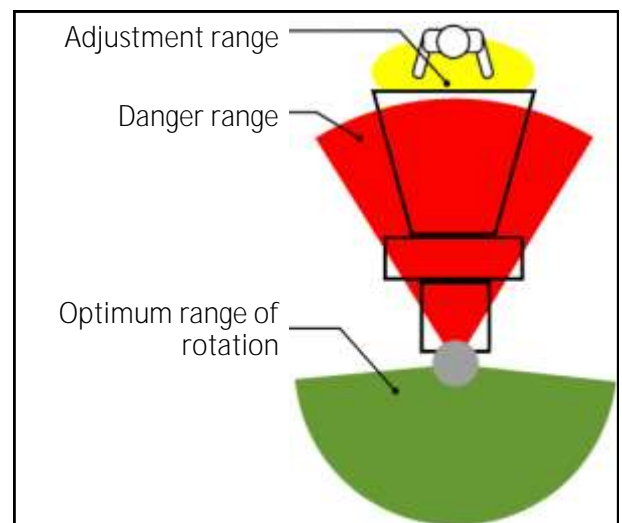

E. Hood

The engine hood protects all movable parts of the machine and ensures safe working for the operator. A fuse stops the diesel engine and prevents a restart as soon as the engine hood is opened.


MATERIAL INFEEED

The **COBRA** is fitted with an electrically controlled hydraulic distributor, which is activated with two buttons at the rear of the infeed hopper for running forwards and backwards, and with a red control rod for disconnection of the infeed roller and the conveyor belt.

Note: The engine has to run at max. speed for making the conveyor belt and the infeed roller turn.


FORWARDS MODE:

1. Move the red control rod back such that the infeed roller moves to forward motion.
2. Push the **yellow** button to make the roller move forwards.

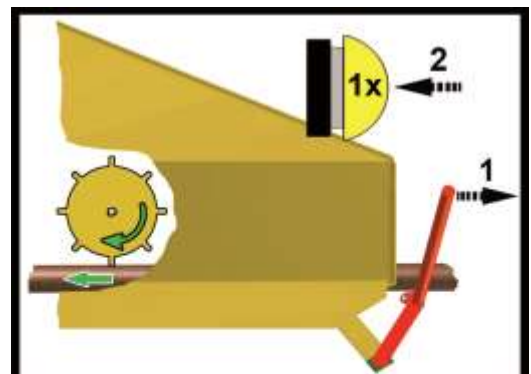

STOP THE INFEEED:


1. Push the red control rod to make the in-feed stop.

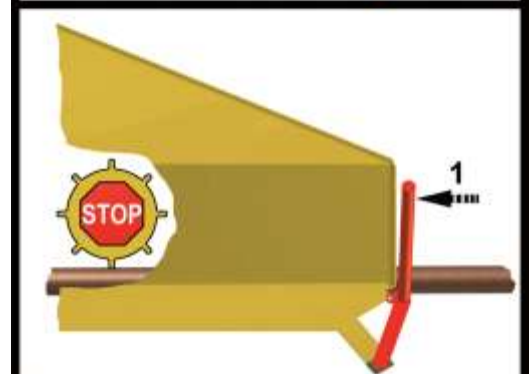

BACKWARDS MODE:

1. Move the red control rod back
2. Push the **black** button.

NOTE: The infeed can be switched directly from forwards to backwards and vice versa without operating the control rod.

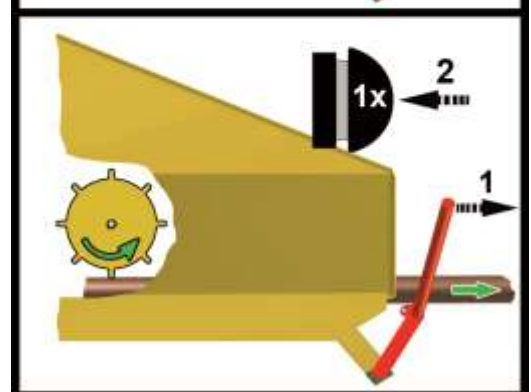


HITCH-UP TO THE VEHICLE

The machine is hitched up to the vehicle as follows:

Adjust the shaft with the crank handle to the height of the trailer coupling of the tractor. Wind the stabilising wheel up using the crank handle until the ball coupling is higher than the ball. Push the ball coupling above the ball and wind the stabilising wheel down with the crank handle until the coupling clearly engages.

Check if the ball coupling is correctly engaged!

Insert the safety cable and connect the plug. Wind the stabilising wheel completely up and secure the wheel with the cotter pin in upper position. Check function of the lighting installation. Ensure that the indication on the coupling is in the green area ([see page 16](#)).

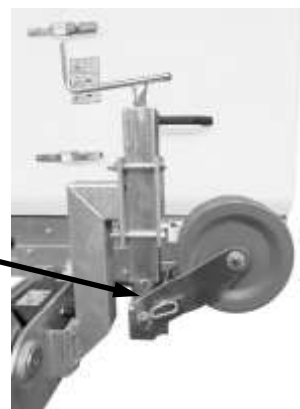

CHECKS PRIOR TO INITIAL START-UP OF THE MACHINE

Every operator has to read and understand the provisions, and has to observe all safety measures included in this chapter. A list with the checks for initial start-up is available to the operator. These checks have to be carried out for safety reasons to ensure the safe and efficient operation of the chipper.

The following points are to be checked before using the machine:

1. The machine is sufficiently lubricated as indicated in the operating manual?
2. Check the following filling levels:
 - Engine oil
 - Coolant
 - Fuel
3. Check the hydraulic oil level.
4. Check that the air filter is clean.
5. Check that the engine radiator is clean.
6. Ensure that all hoods are closed and locked.
7. The machine must not be operated in confined spaces. Risk of intoxication because of the diesel engine exhaust gases and dust generation by the chipper.
8. The expulsion channel and the expulsion hatch are only allowed to be adjusted by an authorised operator.

Operation and version

IMPORTANT!

Operate the device only with Non-Road fuels or customary diesel fuel. By no means use fuel oil.

ATTENTION!

If the machine has difficulties in milling the material and has to be switched off, do not start the engine again before having remedied the cause and removed the material from the rotor!!!

START-UP

Before each start-up ensure that the machine is standing stable on solid ground and that the parking brake is engaged.

- 1) Check if the cover on the chimney is open.
- 2) Turn the key to connect the ignition.
- 3) Start the engine after approx. 30 seconds as soon as the Pilot System opens the display.
 - If the engine is cold the message Temperature too low appears.

(See [page XX](#) if the engine stops immediately again and the message **“slip error”** is indicated in the Pilot System.)



- 4) Press key 1, 2 or 3 (see also [page 43](#)). The engine runs idle until having reached the minimum operating temperature.

Minimum operating temperature is reached: In field 1 is activated the symbol and the engine accelerates to working speed.

As soon as the engine has reached working speed, the message Press start appears together with a Smiley.

- 5) Press the **yellow** key at the feed table to connect feed rollers / conveyor belt.
- 6) Now the work can be started.

In case of overheat the engine power drops (not the speed) at first drops by 20%. In this case check radiator and cooling liquid level, otherwise the engine power drops by another 50% and it is no longer possible to use the machine.

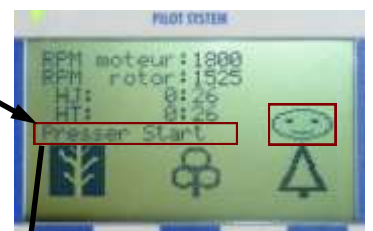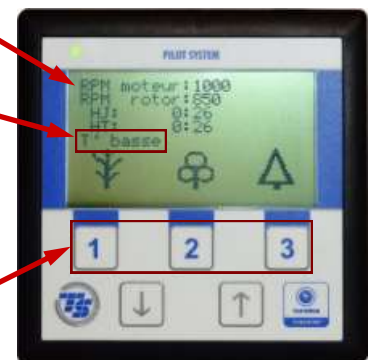

Material infeed and operation

INSTRUCTIONS FOR CHIPPING

Watch out for solid foothold of the operating personnel!

Place chipping material on the hopper bottom and move it with the thicker en (trunk) towards the infeed rollers (chamfer the thick end of the trunk).

As soon as the material is captured by the rollers move to the side, because due to unevenness of the trunk there might be material kick-out.

The captured material now is automatically chipped and hurled into the direction (distance) into which the expulsion chimney was set to beforehand.

After the material infeed from time to time attention is also to be paid to the thrown out chippings, and maybe readjust the direction of ejection. The ejection distance of the material is controlled with the ejection hatch.

When chipping splints, barks and brush-wood splintering can be avoided by always feeding the material side-by-side and lengthwise positioned into the infeed channel.

If the feed stops (jamming because of too much material or forked branches), press the **black** button (rollers rotate backwards) and the chipping material is pushed back. Now reduce the material quantity, cut the forked branch, and restart the infeed.

The hopper can only be cleaned using appropriate wooden aids.



Caution:

While the machine is running do not reach into the hopper! If required, push the kindling further using a wooden slat or wood slider! Never push the chipping material into the hopper using a metal rod or metal slider! It is also prohibited to stay in the danger area! In case of especially thick or hard wood, it makes sense to slow down the engine, reduce the speed until it has reached the rated speed.

If the area of the expulsion chimney is jammed, the hood must not be opened before standstill of the rotor and shut-down drive engine, and then the material can be removed with an appropriate tool.

Noise emission

The chipper produces a guaranteed sound power level according to Directive le 2000/14/EC :

Model	Sound power level EVA [dB]	Sound pressure level [dB(A)]
COBRA	126	124



SAELEN TSINDUSTRIE®

SHUT-DOWN

1. **Have the chipper run for some minutes empty for removing the residual material behind the infeed roller in the chipper to prevent that the rotor becomes jammed in the next application, and the message "SLIP ERROR" is indicated (see page 45).**
2. For stopping the infeed roller move the control rod forward.



- 3) Press again the key of the selected area 1, to switch the engine to idle running again.

Let the engine run idle for approx. 10 seconds for temperature compensation in the turbocharger.

- 4) Turn the key on the control unit to switch the ignition off.



BIODEGRADABLE LUBRICANTS FOR REDUCING ENVIRONMENTAL POLLUTION

Just by their function, the chippers from **TS Industrie** are used as a solution for the sustainable development for the production of compost, mulch and wood chips.

TS Industrie chippers are often used in woods, parks, landmarks, in the proximity of lakes and rivers, where leaks and hydraulic fluids signify a risk for the environment.

Therefore, the company **TS Industrie** contributes to the environmental protection by supplying their machines with **biodegradable high performance lubricants**.

Corresponds to the agricultural Directive 2006/11/EG.

Advantage of biodegradable lubricants:

- No risk for the environment
- Increase biodegradability
- Not toxic (based on rapeseed and sunflower oil)
- Regenerative
- Very high viscosity
- Excellent wear and anticorrosive properties
- Increased safety for the user
- Increased duration of the components
- Reduced volatility properties





SAFETY INSTRUCTIONS



1. Securely park the machine, remove the contact key and wait until the standstill of all mobile parts before starting the maintenance and repair works.
2. After termination of the maintenance works ensure that all protective devices are properly mounted and are operative.

All machines pass a test-drive before leaving the works. On delivery the hydraulic tank is filled up to the upper mark of the sight-glass with hydraulic oil. The filter has to be replaced after 150 operating hours. Thereafter, the replacement takes place according to the maintenance schedule. The first inspection is integral part of the warranty terms.

Only trained personnel is allowed to carry out maintenance and repair works.

The maintenance of the engine is to be carried out according to the enclosed operating instructions of the engine manufacturer.

On delivery, the bearings are lubricated and the transmissions are filled with oil. It is recommended to perform an inspection of the machine prior to initial start-up.

LUBRICANT: Filling quantity:

Motor: 9,75 l.

Fuel: 45 l.

Hydraulic oil: 24 l.

Oil hydraulic coupler: 3,85 l.

Oil reductor feed roller: 1 l.



Recommended LUBRICANTS:

- 1) Lubricants for rotor knives:
Only a water resistant high-performance grease NLGI 2
"SAELEN BIOPLEX "
- 2) Lubricants for bearings, joints and different components:
Multi-purpose high-performance grease SAE (EP).
"SAELEN BIOPLEX "
- 3) Hydraulic oil:
AFNOR NFE 48603 Type HV ISO VG 46
"MINERVA BIO HYDRO 46 "
- 4) 100% synthetic oil motor:
SAE 5W30 / 10W40 norme: API CJ4 / ACEA E6-E9
"MINERVA SYNTHOTRUCK 10W30 "
- 5) Oil hydraulique coupler
AFNOR NFE 48600 Types HV iso VG 46
"MINERVA BIO HYDRO 46 "
- 6) Oil reductor feed roller
SAE 80W90 EP API GL4/GL5
"MINERVA PBH EP 80W90 "

ENGINE MAINTENANCE INTERVALS: See operating instructions of the engine

MACHINE MAINTENANCE INTERVALS

Operating hours	Maintenance works
Every day	<ul style="list-style-type: none"> - Check tight seat of the adjusting joints front side of the trailer coupling/ drawbar - Check function of the safety switches and the red control rod - Check the engine oil level - Check the coolant level - Check the cleanliness of engine radiator - Check the trailer coupling - Check the tight seat of wheel nuts
First time after 4 operating hours	<ul style="list-style-type: none"> - Check the tight seat of all fastening screws - Check the tension of the rotor drive belts - Check the tension of the conveyor
Every 15 operating hours	<ul style="list-style-type: none"> - Lubricate the rotor knives and check condition of wearing rings
Every 50 operating hours	<ul style="list-style-type: none"> - After the first 50 operating hours: Check the tight seat of the 8 fastening screws from rotor bearings (330 Nm) - Check knives and counter-knives - Lubricate both rotor bearings - Check ventilation holes under the rotor for free passage - Check if material is wrapped around the bearings and remove - Check infeed rollers - Check the hydraulic oil level - Check the tension of the conveyor
Every 150 operating hours	<ul style="list-style-type: none"> - Lubricate front/rear bearings of conveyor - 1. Replace the hydraulic oil filter (thereafter all 500 operating hours or every 2 years) - Lubricate drive chain of conveyor - Check condition of counter-knives
Every 300 operating hours	<ul style="list-style-type: none"> - Check condition of conveyor and slide plate - Check the battery acid level - Check oil gear box feed roller
Every 500 operating hours	<ul style="list-style-type: none"> - Change the hydraulic oil (or every 2 years) - Replace the hydraulic oil return filter (or every 2 years) - Replace the intake strainer in the hydraulic oil tank - Oil change gear box feed roller - Oil change hydraulic coupler

LUBRICATING POINTS




Shut the engine off and remove the key before the lubricating and maintenance works.

LUBRICATION OF KNIVES:

Access to the rotor:

- Loose both locknuts.

- Turn the expulsion channel to the side.


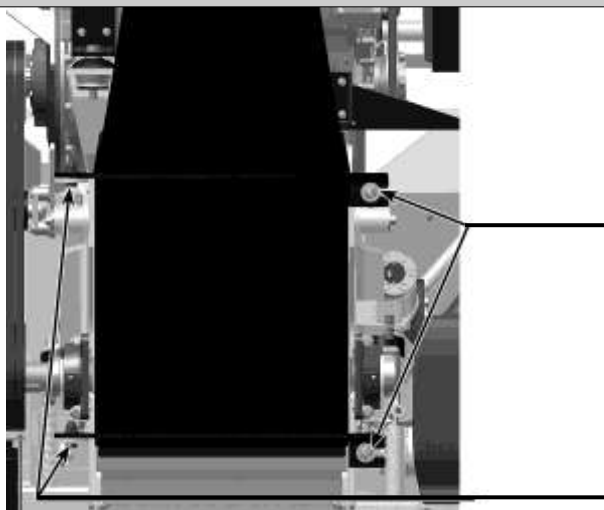


- Clean all grease nipples with compressed air or using a small screwdriver.

- Lubricate all 12 knives.


Note: Do not grease too much, i.e. only about 2 strokes with the grease gun.

An excessive lubrication, the rotation of the rotor would toss the surplus of grease against the inside wall of the chimney, and the chipped material would be expelled with difficulty.

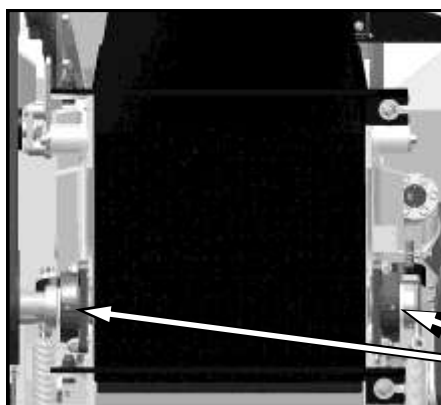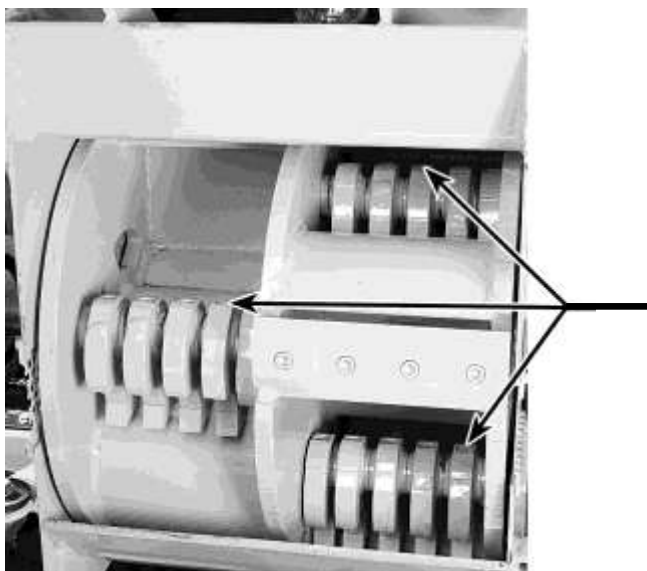

ROTOR BEARING LUBRICATION


LUBRICATING POINTS

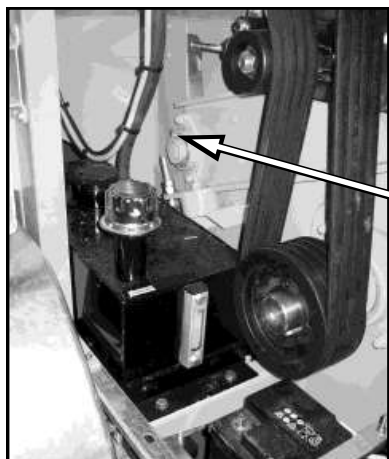

LUBRICATE INFEEED ROLLER BEARING LEFT/
RIGHT




LUBRICATE BOTH FRONT CONVEYOR BEARINGS

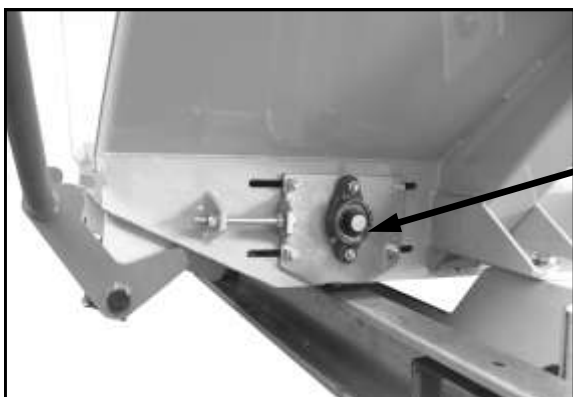

LUBRICATE BOTH REAR CONVEYOR BEARINGS


POINTS DE GRAISSAGE

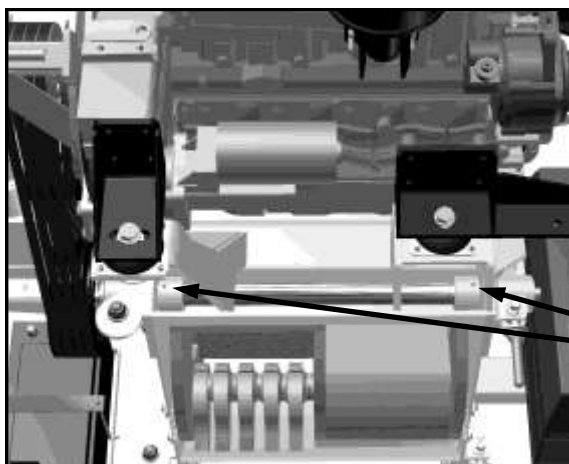

LUBRICATE THE ARTICULATION AXIS OF THE FEED ARM




BRAKE AXIS OF THE COUPLING HEAD

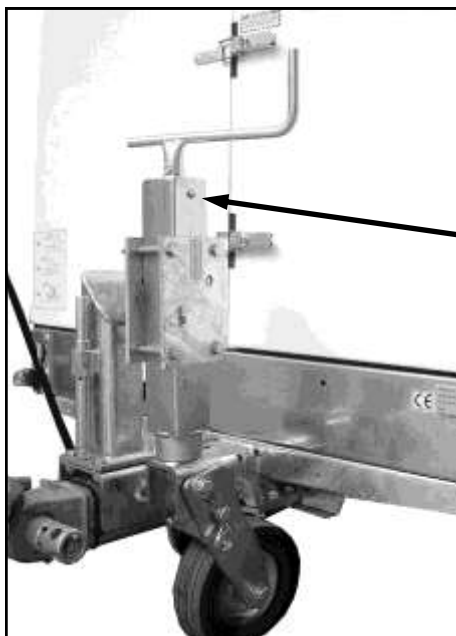


ADJUSTABLE WHEEL


OIL LEVELS

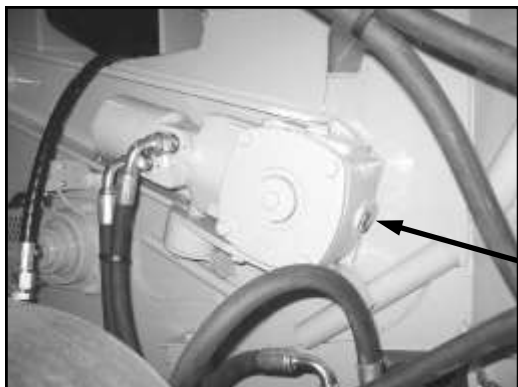

LEVEL FEEDING REDUCTION VALVE
(the oil should flow lightly against this opening)


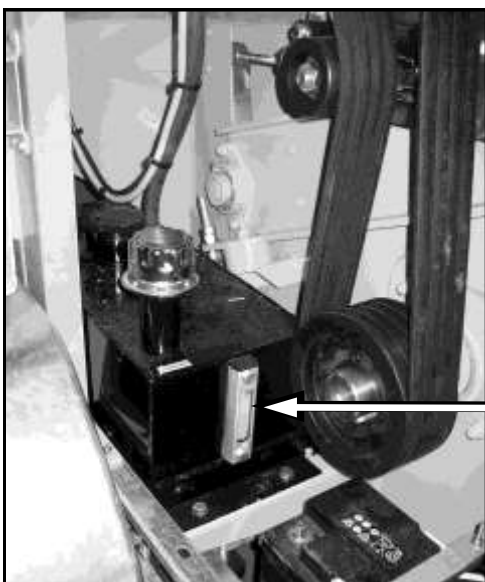


LEVEL IN THE HYDRAULIC TANK

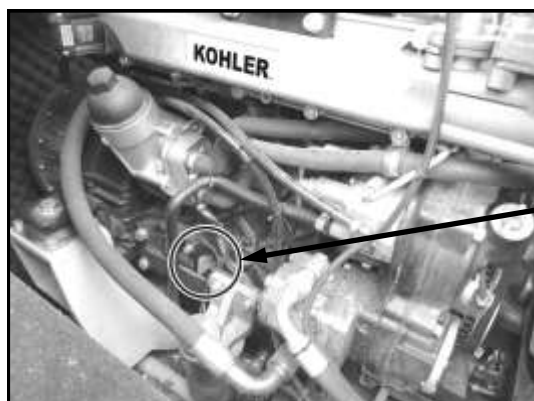

ENGINE OIL LEVEL
(to change the engine oil, see [page 56](#))

ADJUSTING THE TENSION OF THE CONVEYOR BELT

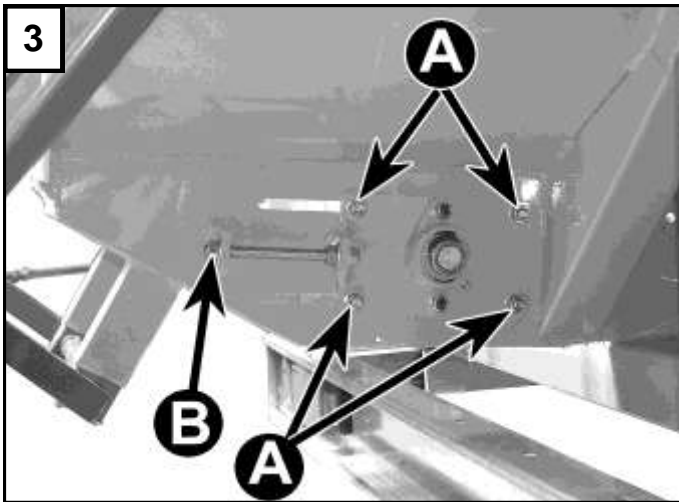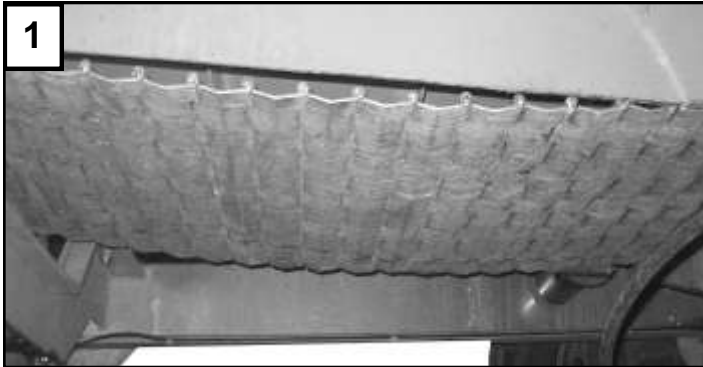

After run-in of the machine, the tension of the conveyor belt must be checked after the first 4 operating hours, and thereafter every 50 operating hours.

1 Conveyor belt correctly tensioned

2 Conveyor belt loose


3 Tension the conveyor belt as follows: Loosen on

both sides of the machine all 4 nuts (A), and tension the conveyor belt with the tensioning screws (B) such that the roller is standing centrally in the window for maximum tension (Fig. 4). Tighten the nuts (A) again. Have the conveyor belt run several times forward and backward, and check for directional stability.


Note: Do not tension the conveyor belt to much; for running correctly the belt does not need excessive tension. Utilise the window for maximum tension



Attention: Avoid infeed of roots with earth still sticking to it. This might accumulate in the front drive roll and block the conveyor belt.

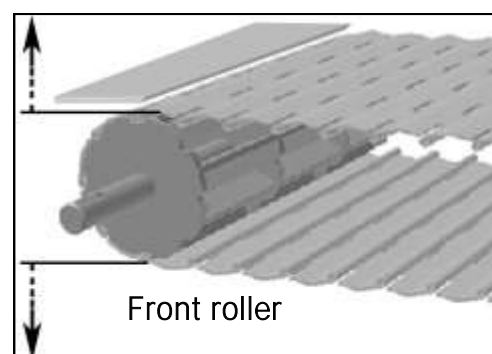


CHECK CONDITION OF CONVEYOR BELT AND SLIDING PLATE

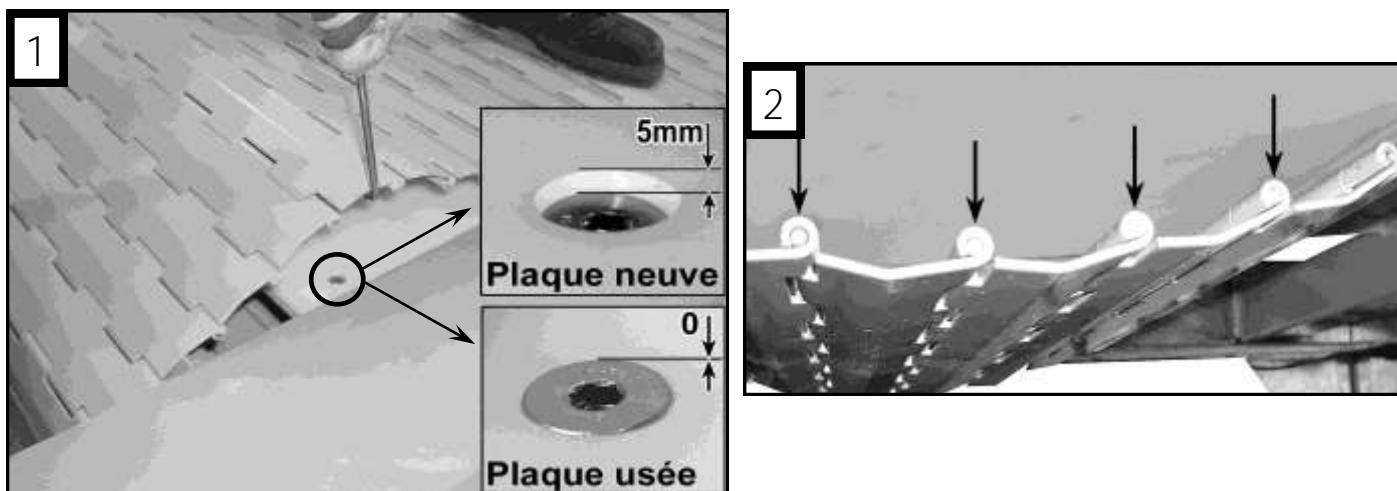

For checking the conveyor belt and the self-lubricating polyethylene plate, completely relax the conveyor belt and lift it with a hook. The following parts have to be checked:

- 1** Thickness of the sliding plate above the 4 fastening screws
- 2** Condition of the belt rods

VENT OPENINGS UNDER THE ROTOR

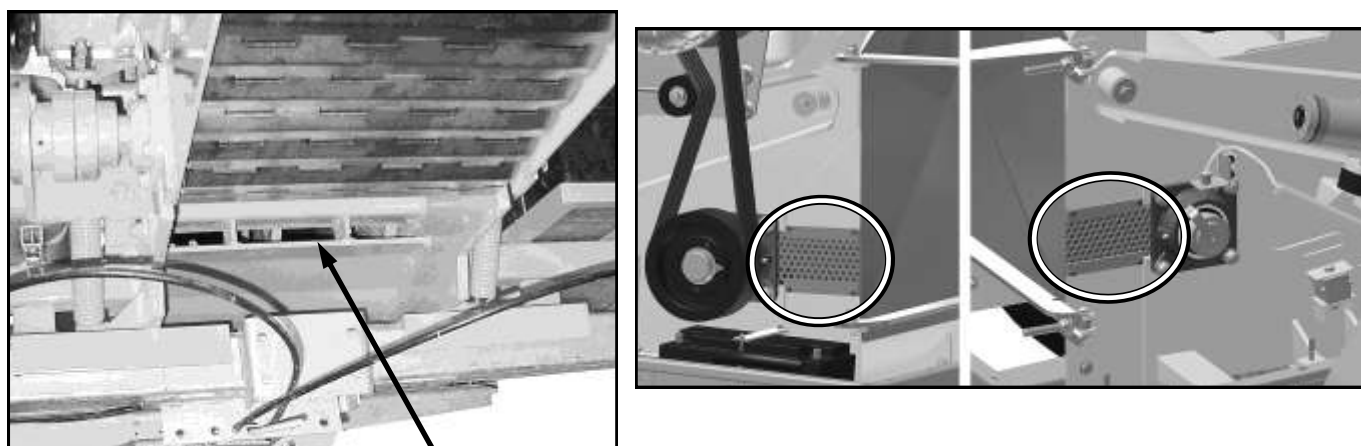


For improving the rotor ventilation and the material expulsions, the **COBRA** is fitted with another vent opening under the rotor, additionally to the standard two lateral vent openings.

These air intakes must be checked for cleanliness and free passage in regular intervals.

KNIFE AND INSERTS REPLACEMENT

Remove ignition key before the maintenance works.

- Ex works, all 6 fastening screws of knives and inserts secured without screwlock medium, with a torque of **157 Nm (16 M.kg)**, and therefore must be loosened using a corresponding tool.
- Open the expulsion channel (see page 28).
- Unscrew all fastening screws from knives and inserts. Do always use new screws of **class 12.9** for installing knives and inserts.
- Clean contact surfaces (1) and shoulders (2) of knives and inserts.

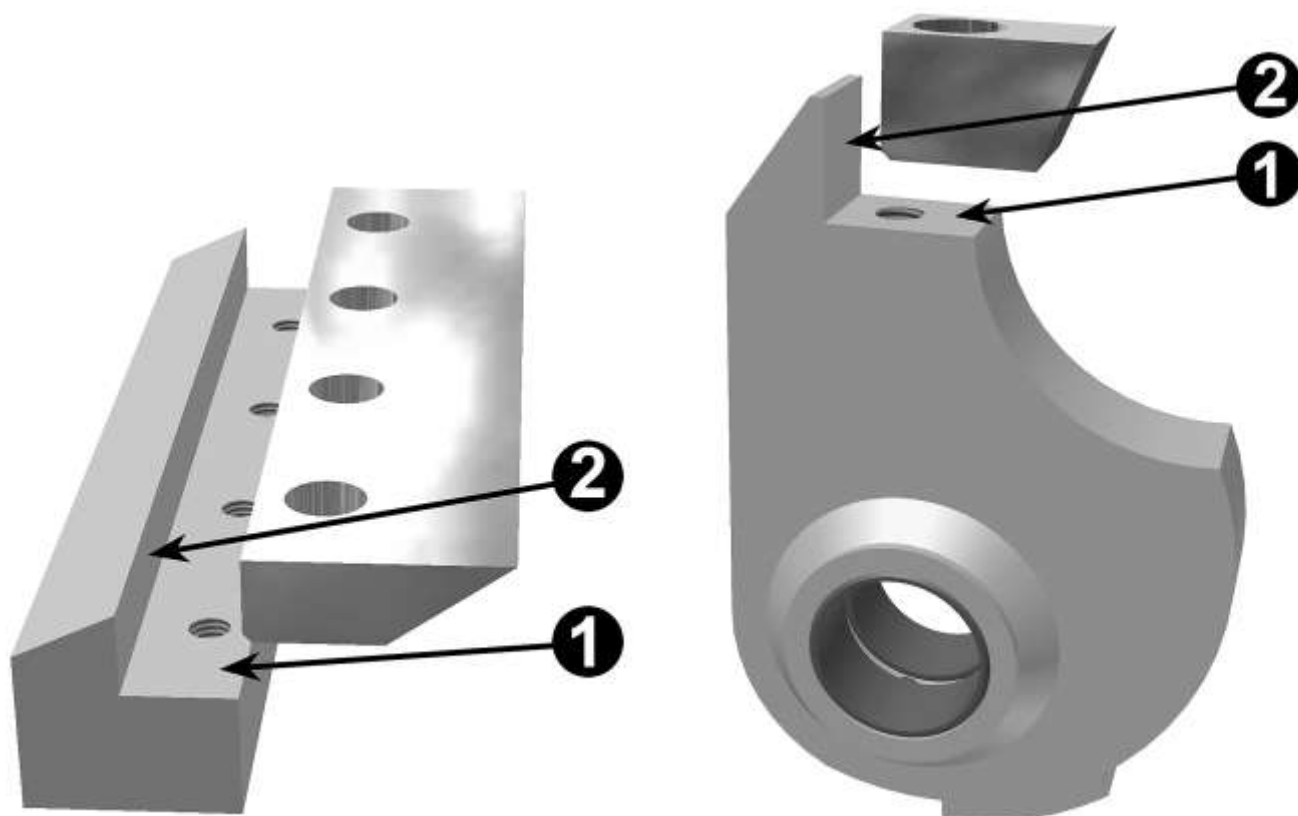


Maintenance

- Install new or sharpened knives of identical weight.

IMPORTANT: Only a specialist is allowed to sharpen the knives on an appropriate machine and not on a portable grinding machine.

Also it is to be observed that the edge of the knives is to be sharpened at an angle of 35° .

After sharpening, the length **A** must not fall below 50 mm (a new knife has a length of **60 mm**).

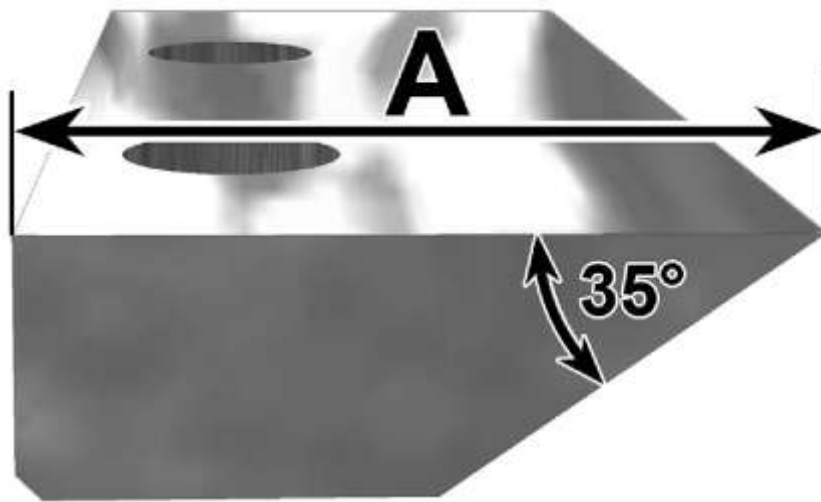

Do only use screws of type TCHC 12 X 40 class 12.9

- Tighten screws of class 12.9 applying a torque of 157 Nm and ensure correct seat of knives and inserts.

Tightening with the correct torque is important to prevent the screws from coming loose.

- Lubricate the knife bolts (for each grease nipple aprox. 2 strokes with the grease gun).
- Close expulsion chimney and hoods again.
- Start the engine and have it run until it has reached operating temperature.
- Accelerate the engine up to maximum speed and check if the machine produces unusual vibrations.


CHECK COUNTER-KNIFE

Remove ignition key before the maintenance works.

- Unscrew retaining screws Ø10 **(1)** at both ends of the counter-knife.
- Unscrew both locking screws Ø8 **(2)**.
- Pull the counter-knife partially out of the housing. If the edge is worn, pull the counter-knife out of the housing, give it a quarter turn, such that the new edge is pointing towards the knives, and push the counter-knife back into the housing.

(The counter-knife can be pulled out of the housing on the right side as well as on the left side)

(All 4 edges can be utilised)

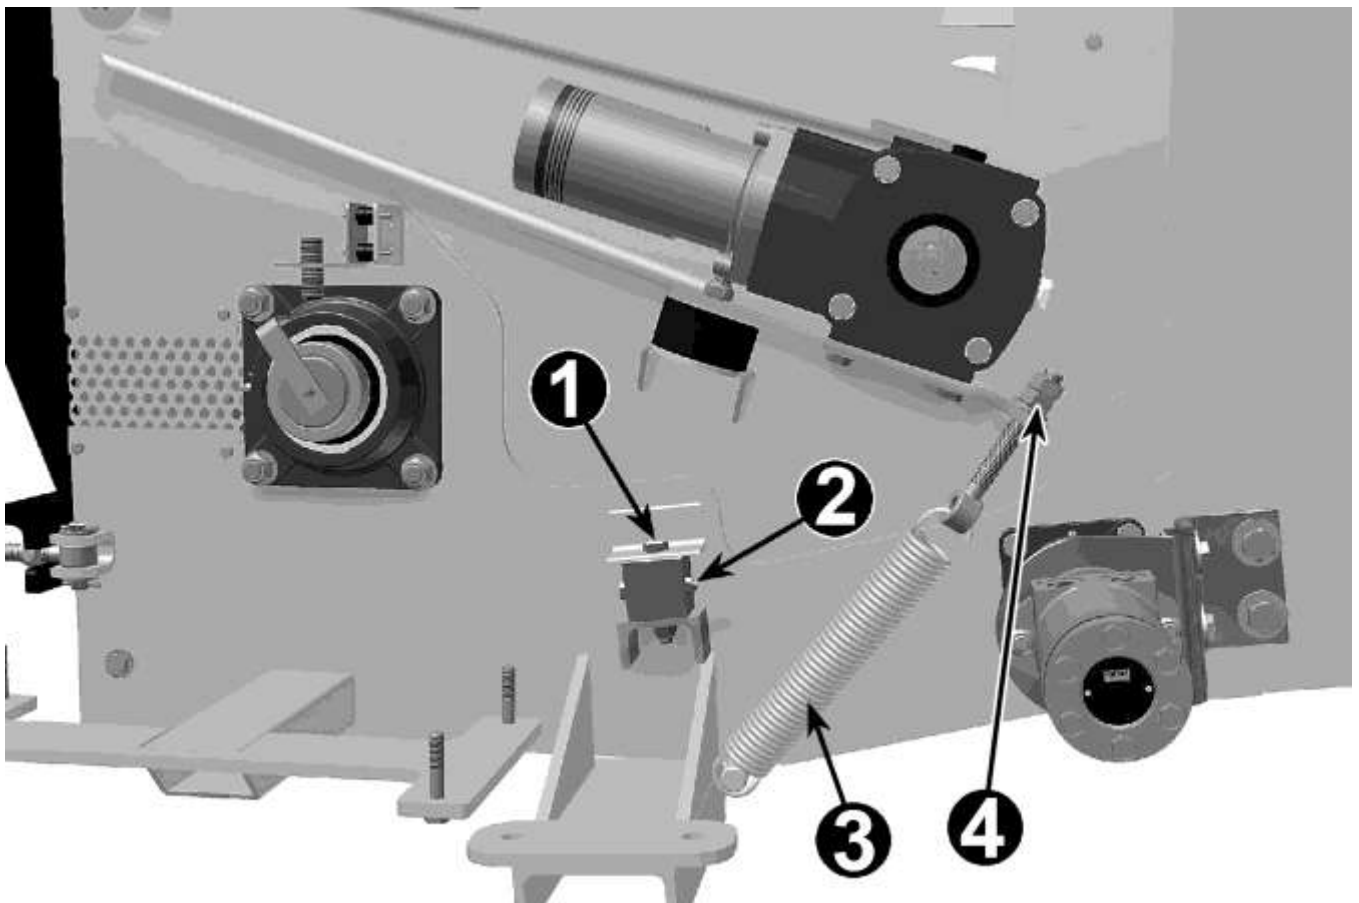

PRESSURE OF THE INFEEED ROLLER ONTO THE MATERIAL

The feed roller puts pressure on the material through two springs **(3)** (1 on each side)


The voltage may be changed by acting on the tensioner **(4)**

TENSIONING THE V-BELT FOR THE ROTOR DRIVE

The tension of the V-belts is ensured by a belt pulley(1).

The adjustment of the V-belt tension is carried out by loosening the nut (4) on the belt pulley as well as the locknut (3) and readjusting the belt pulley with help of the screw (2).

Only trained personnel can carry out this work.

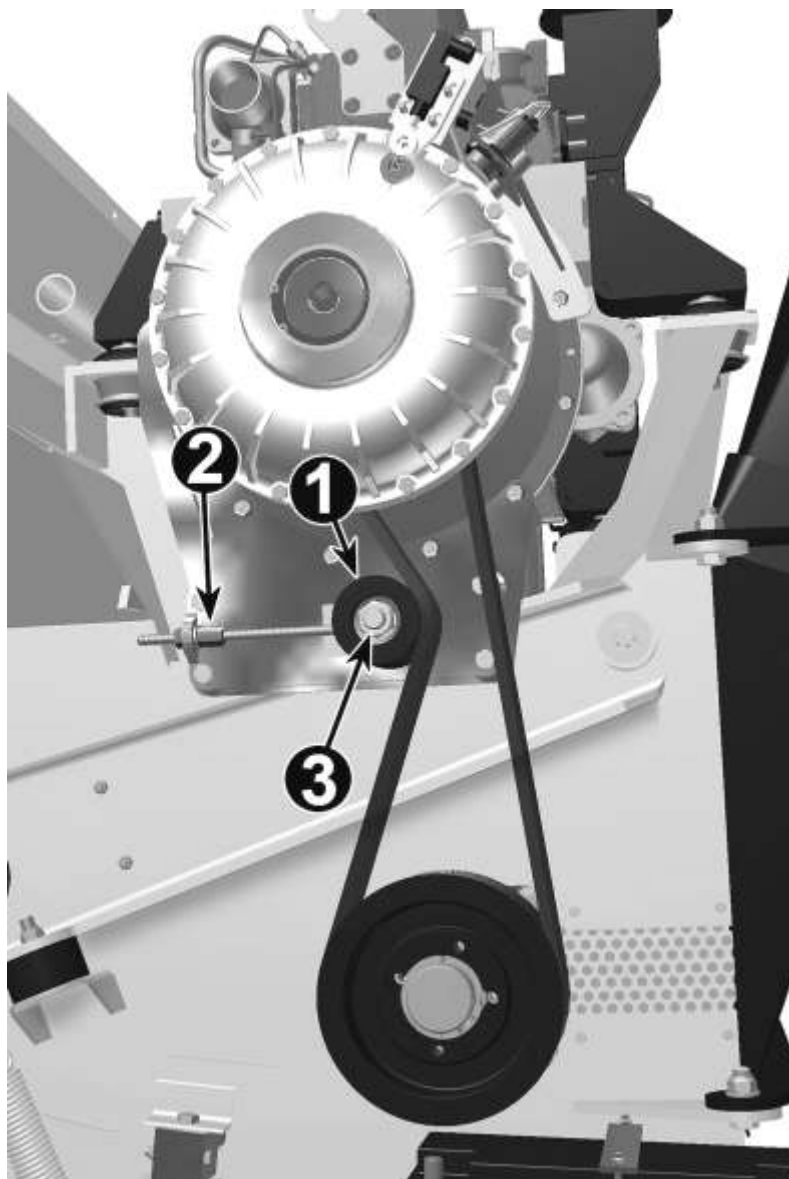


MAINTENANCE OF THE HYDRAULIC COUPLING

The COBRA is equipped with a hydraulic coupling that requires no specific maintenance with normal use.



Location of the safety switch

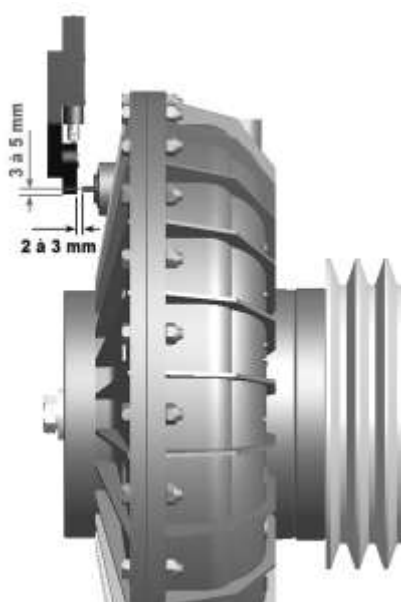


Changing the oil




Change the oil via the green cap (*First purge the coupling by unscrewing the top cap*)

Filling

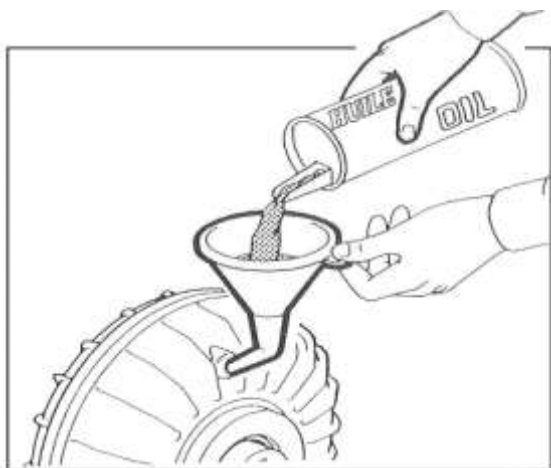

Add oil through the expansion cap or the green cap

Oil level

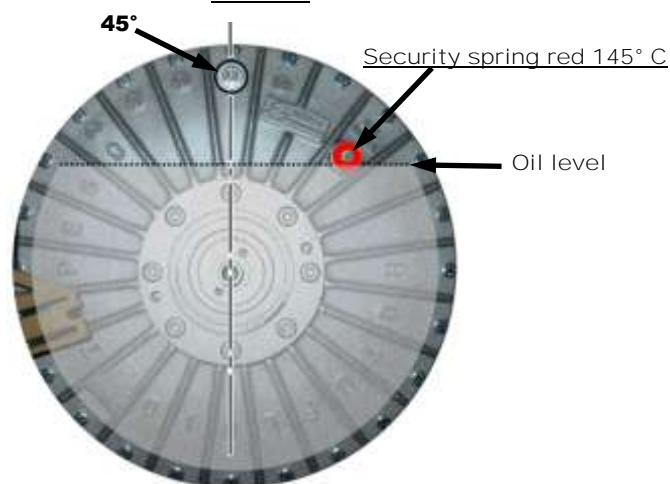

Set mark 45 vertically to the coupling axis. Remove the expansion cap and if the level is correct, the oil is at the same level as the opening.



Maintenance

ADJUSTMENT OF THE BRAKES


Brake lever in lower position



Push the pins out of the plastic rivets, remove the rivets and take the black plastic cover under the drawbar off.

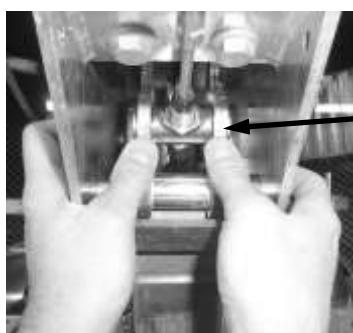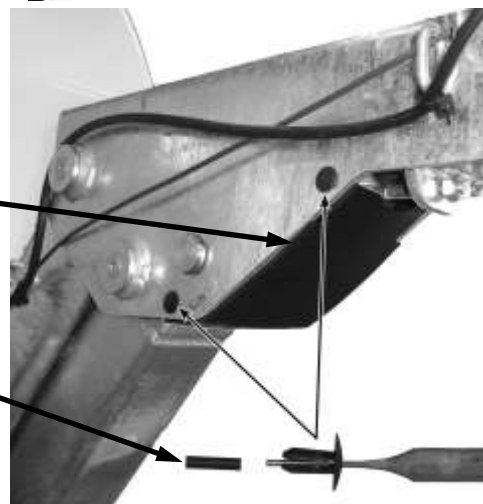


Operate the shift pawl with your thumbs and check clearance between pawl and piston plate.

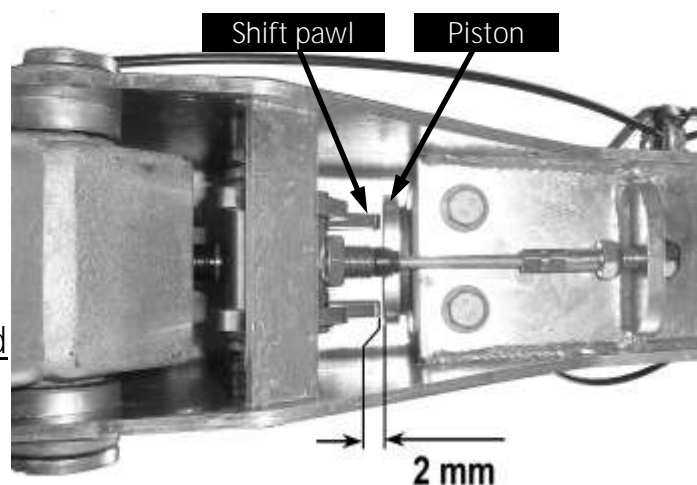

The clearance must amount to 1 to 3 mm.

Excessive clearance causes sudden and delayed braking.

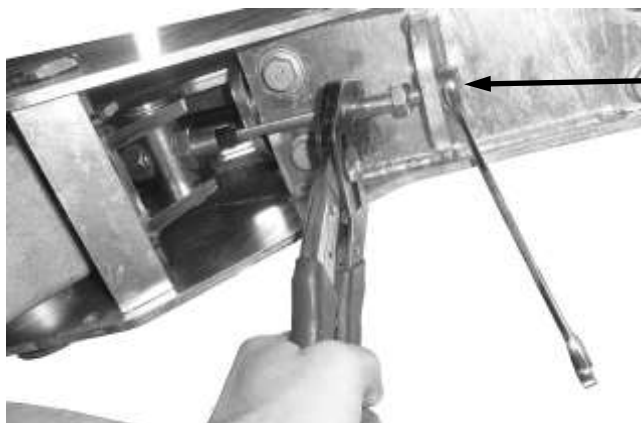

In case of excessive clearance, retighten the nut on the cable end using a ring spanner (17 mm). In case of insufficient clearance, retighten nut and locknut below in front of the axle.




Description and handling

ENGINE START SWITCH

0: Position OFF. Ignition off



1: Position IGNITION ON. Engine is running after the start

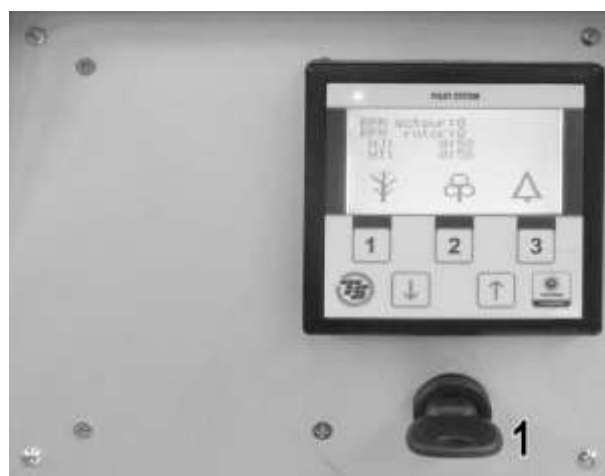

Start: Position START ENGINE

After the start the key goes back to position 1.



Description et manipulation

PILOT SYSTEM "SWING"

The system is connected with the electronic engine control ECU and is used for optimising fuel consumption and rotor power by adapting the engine speed to the material to be milled.

Available functions

MACHINE FUNCTION:

1. Continuous indication of the engine speed
2. Continuous indication of the rotor speed
3. Continuous indication of the daily operating hours
4. Continuous indication the total operating hours
5. Indication for operation and of the pulses from the rotor encoder with green LED
6. Indication of errors with red LED
7. Hydraulic test: a fast forward and backward travel speed serves for testing the hydraulic system
8. A fast forward movement of the infeed roller serves for testing the No Stress System
9. 3 No Stress (Vario Stress) Options for choosing the type of wood
10. Service management : Intervals for oil change
11. Belt slip, clutch and hydraulic coupling system (ideal for rental equipment)
12. Cut-out fuse for engine and start interlock if hoods are open
13. Error memory
14. 21 Machine types are lodged in the memory
15. 4 optional selectable languages: English, French, German and Spanish

ENGINE FUNCTION:

16. 3 working speed adjusted to 3 NoStress milling ranges.
17. Display of engine data and errors: Oil pressure, coolant temperature, engine load, etc.




Description and operation

Description

LED:

- Green - continuous: ON
- Green - flashing: Pulses from rotor encoder
- Red - continuous: Engine hood or access to chimney open

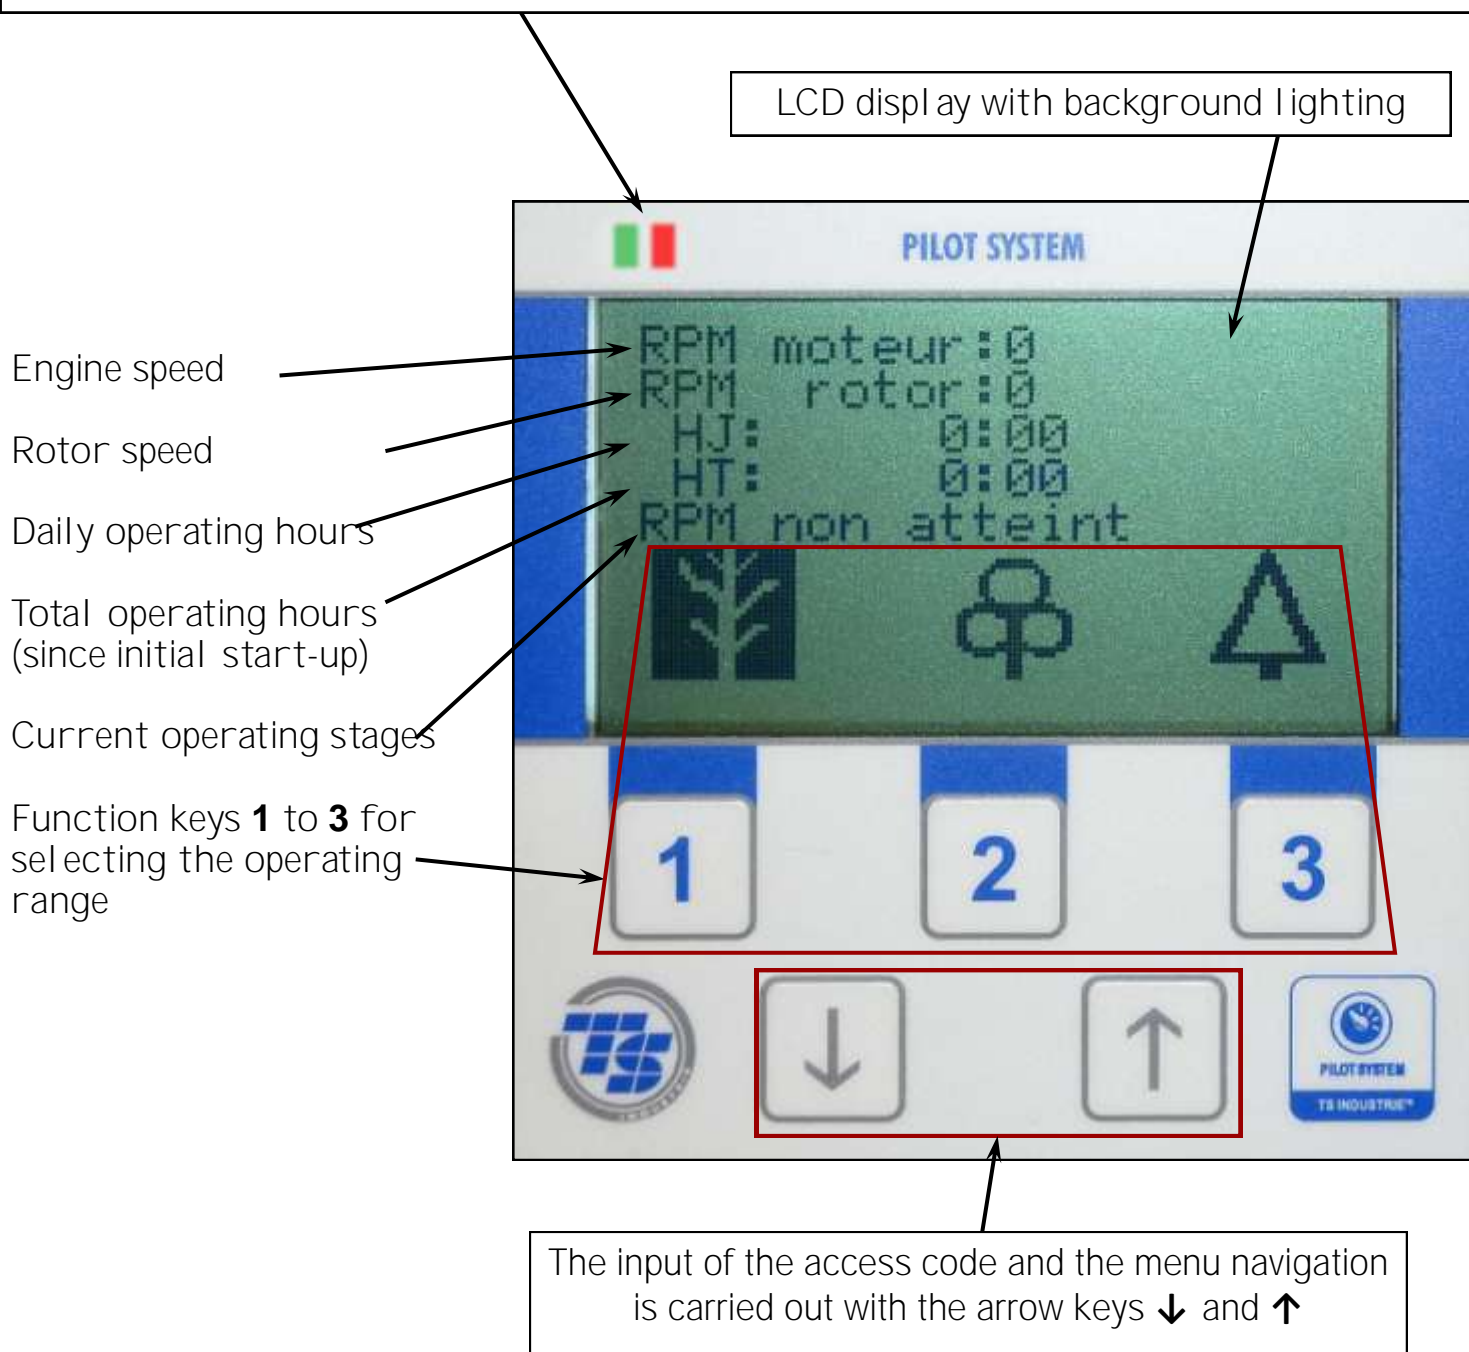

It is strictly prohibited to change the factory settings of the Pilot System. The programming person is responsible for any change of the parameters outside the works of TS Industrie.

The values for the Pilot System indicated on the following pages are approximate values.

Description and handling

Select mode of application NoStress

The Pilot System has 3 modes of application available.

Above each key there is a symbol with a black background after the according key was activated.

Key 1: The engine runs at moderate maximum speed (1800 revs/min), and No Stress matches the control of feed rollers and conveyor belt to this speed.

Appropriate for milling branches.


This application mode uses a very low amount of fuel and works at a reduced noise level.



Key 2: Optimum working speed for shredding. The engine runs at medium speed (2200 revs/min) and an according No Stress control.


Appropriate for milling branches with foliage and for a short time for coniferous wood and green waste.

This mode of application consumes a low amount of fuel and does also work at a reduced noise level at maximum utilisation of the machine power.

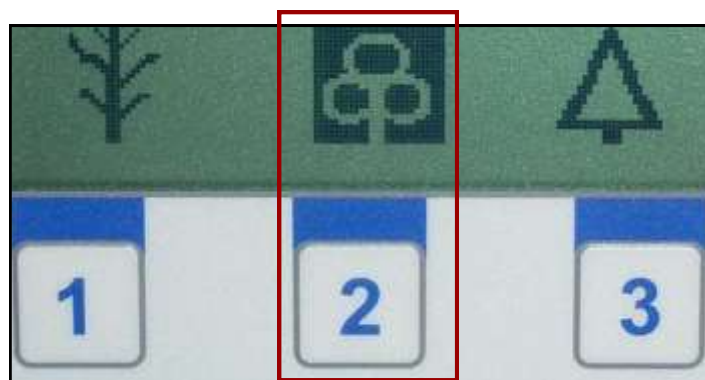

Key 3: High-performance modes of the machine. The engine runs at the maximum power allowed speed (2600 revs/min) and maximum utilisation of engine and expulsion power of the machine under extreme application conditions.

Appropriate for milling coniferous wood and heavy green waste.

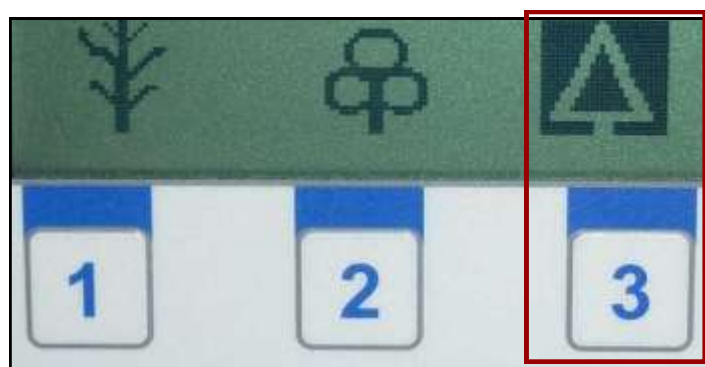


When changing the mode of application during work it is required to press the yellow switch for connecting the feed rollers again.


Standard operation and overspeed

The speed of the rotor is the essential data for the functional check of the machine.


The indication **RPM too low** shows that the engine speed is insufficient for continuous material infeed to the rotor.

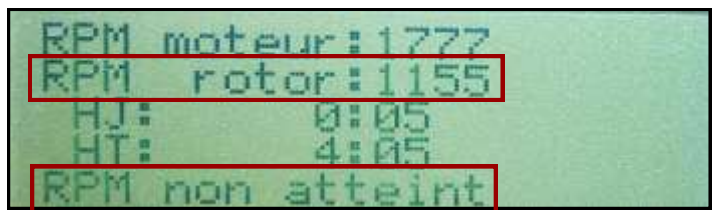


Adjust engine to max. speed. A **Smiley** is shown as soon as the minimum speed is reached for connecting the infeed roller. Now the **yellow** button can be activated.

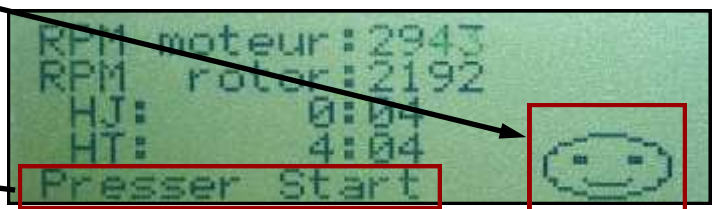

As soon as the infeed roller is rotating and the rear red control rod is activated, appears the message infeed stop.

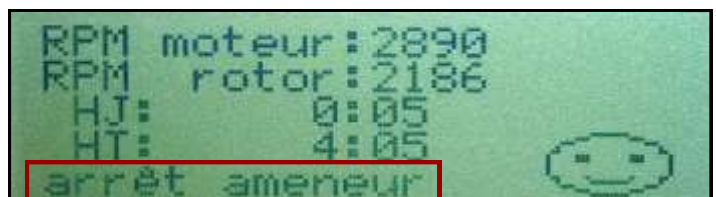

If the rotor speed is too high, the infeed roller is automatically stopped to protect the machine. At the same time appears the symbol Attention as well as the message **over-speed**.

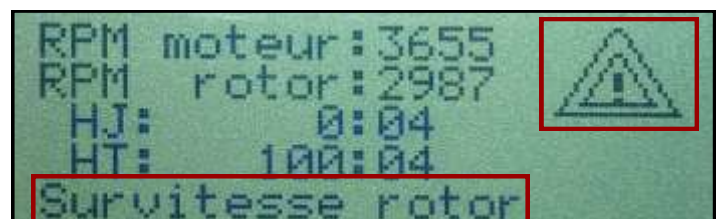


After having removed the cause for the overspeed it is required to reduce the engine speed to idle running, then increasing it again to max. Speed, to allow the infeed roller to re-connect.

Slip function

The Pilot System controls the slip of the rotor propulsion by continuously comparing the speed of the engine flywheel with the speed of the belt pulley of the rotor. A reduced slip is admissible for protection of the propulsion system (V-belt, centrifugal clutch and hydraulic clutch). As soon as the slip passes a defined value, the engine is stopped and according message is displayed.

Causes for slipping of the propulsion:

- Rotor jammed when starting the engine or during service
- V-belt loose
- Insufficient oil level in the clutch or the clutch is defective

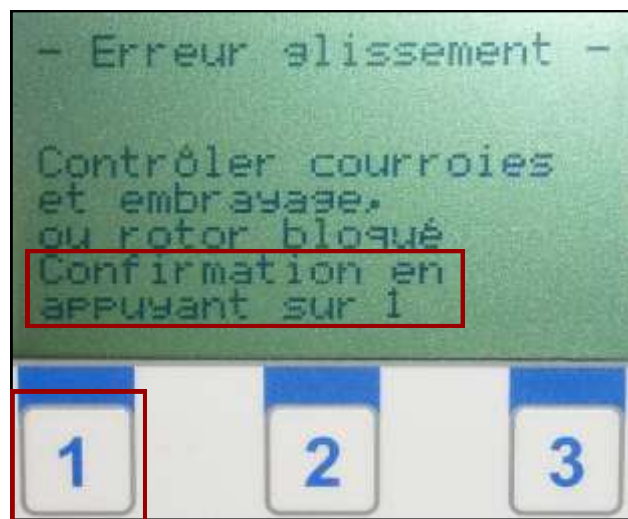


Note: Slip can be produced if the machine from standing is accelerated very slowly.

After stopping/checking the drive press key 1 to be able to continue work.

Date and time of this message are saved in the memory of the Pilot System, and can be read by the dealer.


Access to the CUSTOMER Parameters Code 3003

1

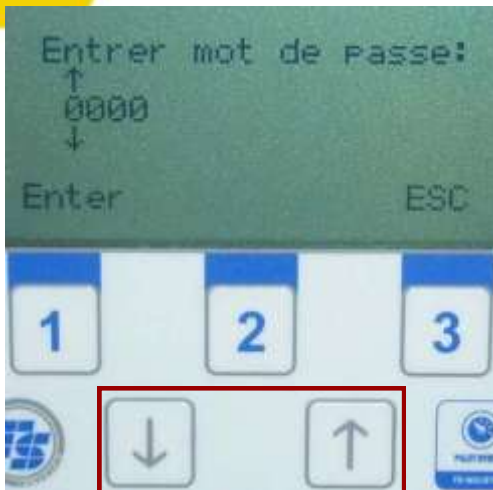


Keep key ↓ and ↑ pressed for 4 seconds.

2

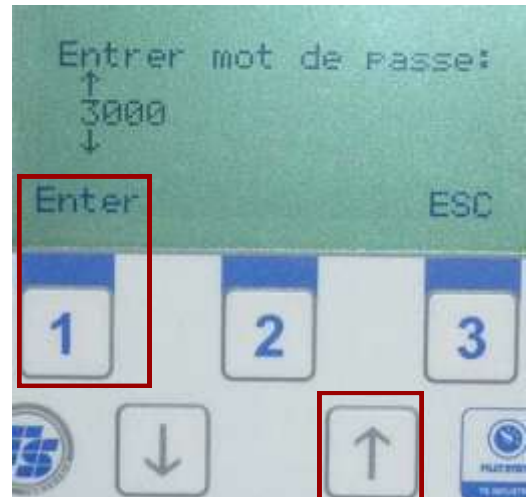


Press key ↑ **3 times** until the number 3 is displayed, than confirm with key 1.

3

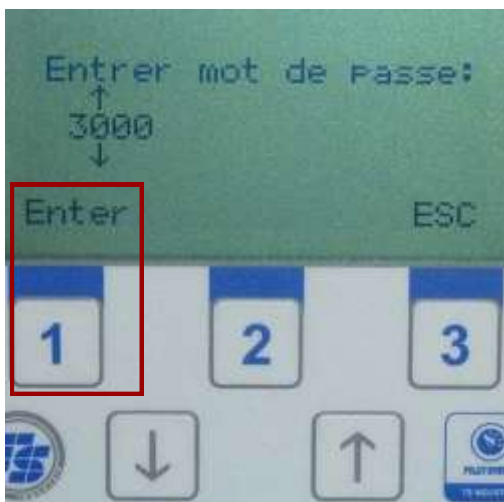


Press key 1 for confirmation and go to the first 0.

4

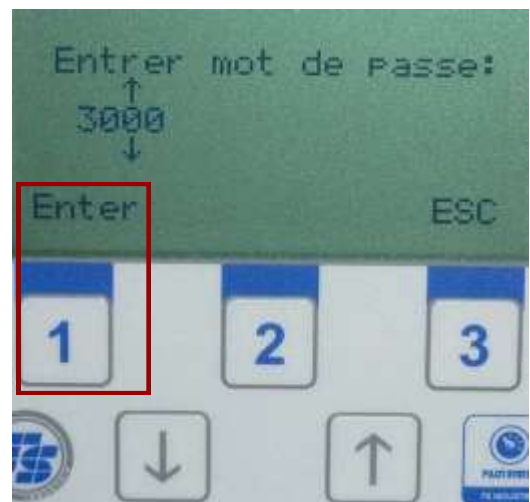


Press key 1 again for confirmation and go to the second 0.

5

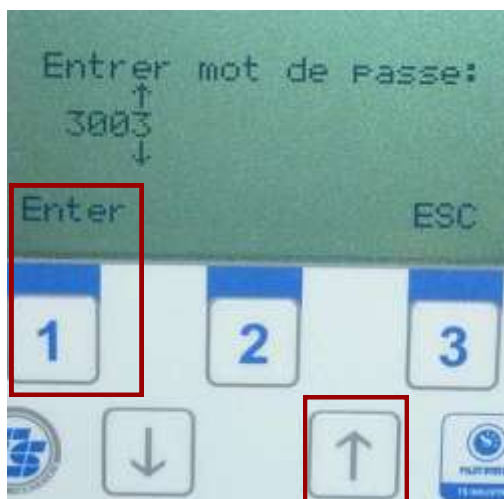


Press key ↑ **3 times** until the number 3 is displayed, the confirm with key 1.

6

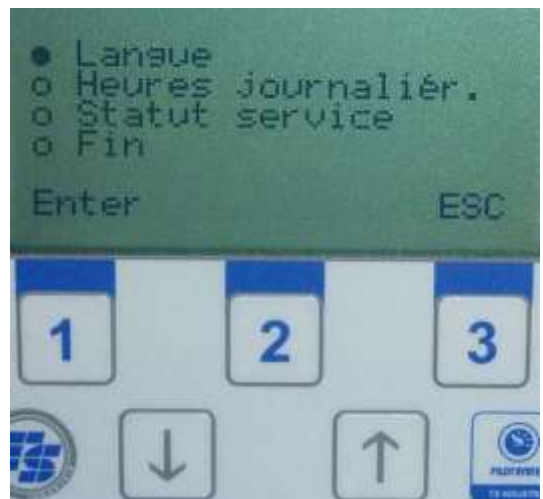


Now, the user has access to different functions and END navigation.


Reset of the daily operating hour counter

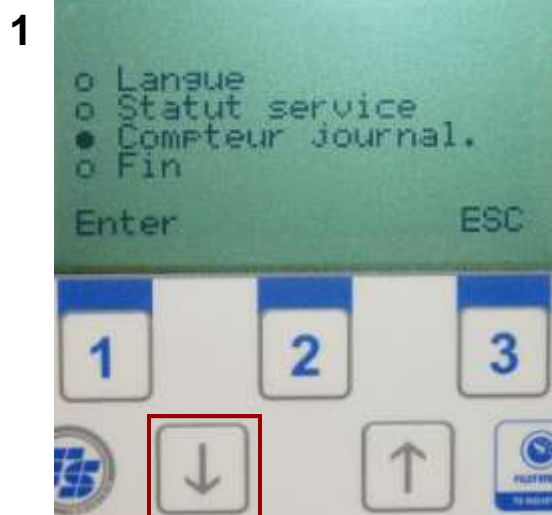


Press key ↓ and put the cursor on Daily oper. hrs.

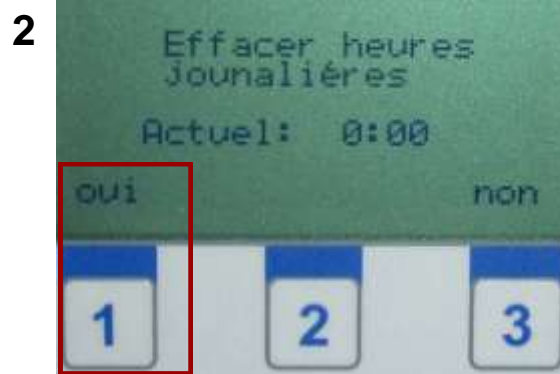

Press key 1 to confirm deletion of the daily operating hours.

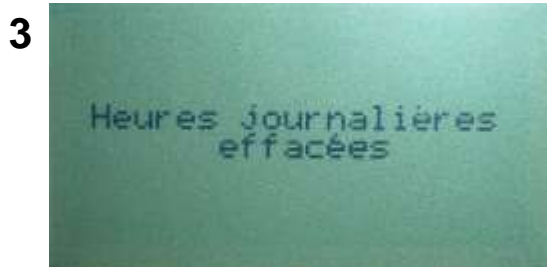


The process is indicated with a corresponding message.

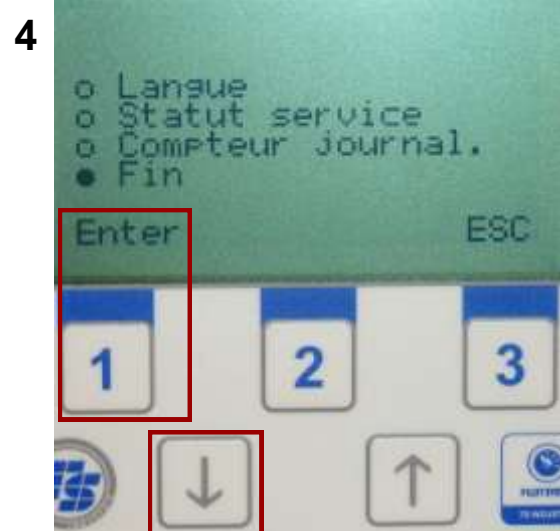

Press key ↓ and put the cursor on End. Confirm with key 1 Enter.

Overdue service and further service information *(engine oil change)*

When starting the machine, the system shows a warning message and a corresponding symbol as soon as maintenance is due or overdue.

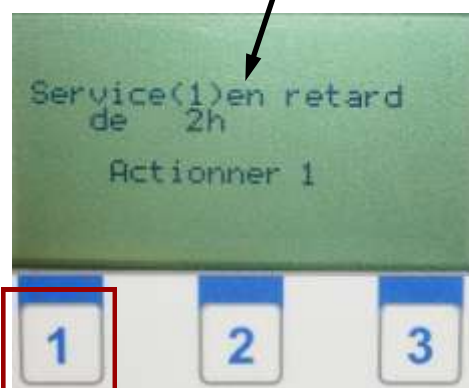

Agree with your dealer a date for an oil change. The message is saved in the Pilot System. Press key 1 for confirming the message and to be able to continue work.




Press key ↓ or ↑ once or twice for displaying the next oil change or service. Contact your dealer to agree a date.

Description and operation

Rotor speeds of the No Stress settings

(The examples are reference values only)

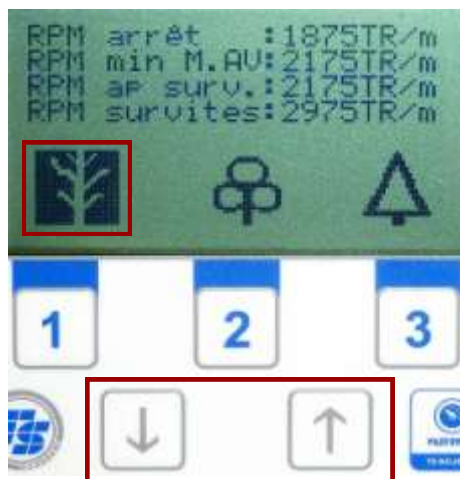

Press key ↓ or ↑ once or twice at any time for indication of the **rotor speed** for the selected NO Stress setting:

Example setting 1:

Minimum: Speed below 1875 rpm. The infeed roller is disconnected.

Return: As from a speed of 2175 rpm. The infeed roller is restarted.

Normal: After an overspeed of the engine, the speed of the rotor must be reduced to below 2175 rpm for the infeed roller to reconnect.

Over: Overspeed. The infeed roller is switched off at a speed of 2975 rpm.


Attention:



It is strictly prohibited to change the factory settings of the Pilot System. The programming person is responsible for any change of the parameters outside the works of TS Industrie.

Hood safeguard

An open or not correctly closed hood is indicated by a red LED and an according message. The safety system switches the engine off and prevents restart (starter blocked). In this case close the according hoods correctly and then press key 1.

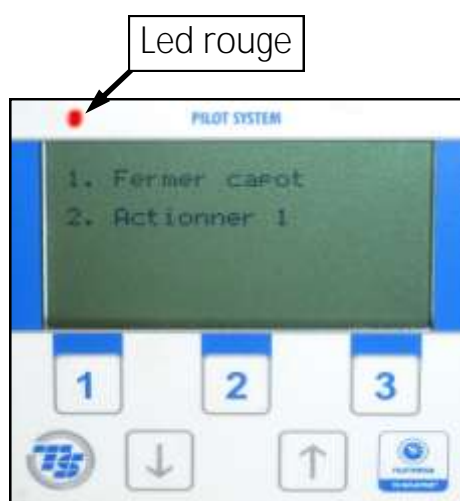

Rotor speed encoder pulses

A permanently shining green LED shows that rotor and system are operating. The LED starts flashing when it receives a signal from the speed encoder M18 on the rotor. The frequency of the flashing changes with the speed of the rotor.




Description and operation

TANKS

The machine is fitted with two tanks:

Hydraulic oil tank with a capacity of 30 liters, consisting of:

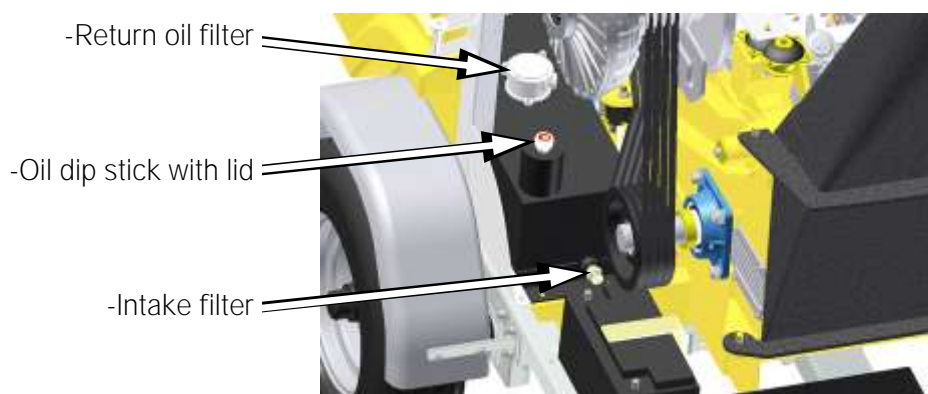

Fuel tank with a capacity of 47 litres




Description and operation

SAFETY HOUSING

The machine has security devices on the opening of hoods:

An inductive pick-off (1) placed on the hood's right door. The electric contact is made when the magnet (2) fixed on the left door of the hood is approached.

When you open either one of the doors the security device stops the diesel engine.

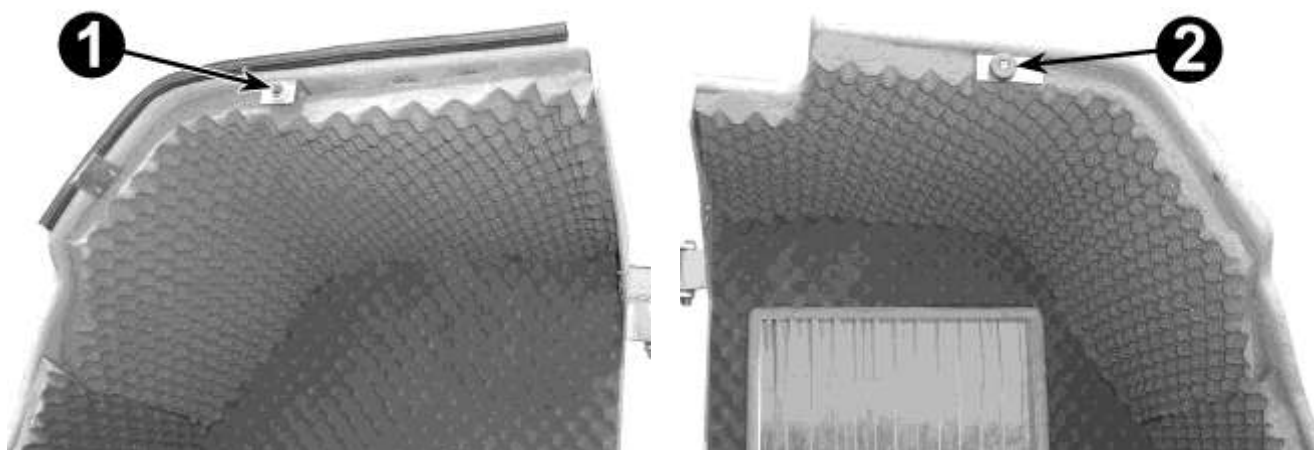

There may be no physical contact between sensor and magnet. There must be 0,24 (+/- 0.20) in (6 mm +/- 5) play.




Description and operation

EMERGENCY STOP BUTTONS

The machine also has two emergency circuit breaker buttons placed at the top of each side of the feed hopper.

When they are activated, these emergency circuit-breakers have two functions:

- 1) stopping the diesel engine
- 2) instantly stopping the forward run of the feed roller and the belt

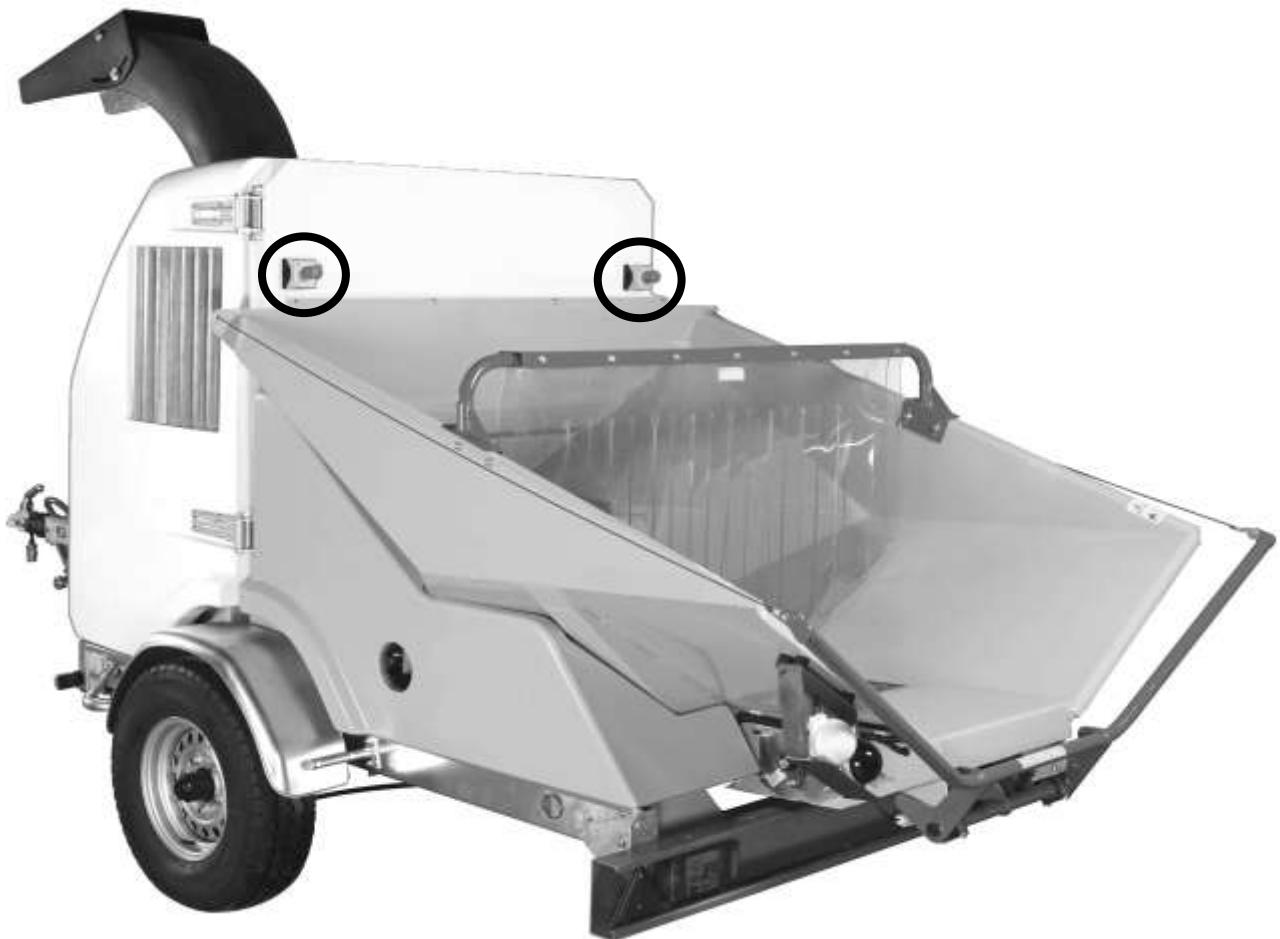

Description and operation

CAPTEUR INDUCTIF et FUSIBLES DE PROTECTION


The proximity sensor M18 (Ø18) at the end of the rotor shaft captures the speed and sends it to the Pilot System.

NOTA: see page 50



3 à 4 mm

The distance between sensor and metal pin opposite of the V-belt pulley must amount to 4 mm ± 1 .

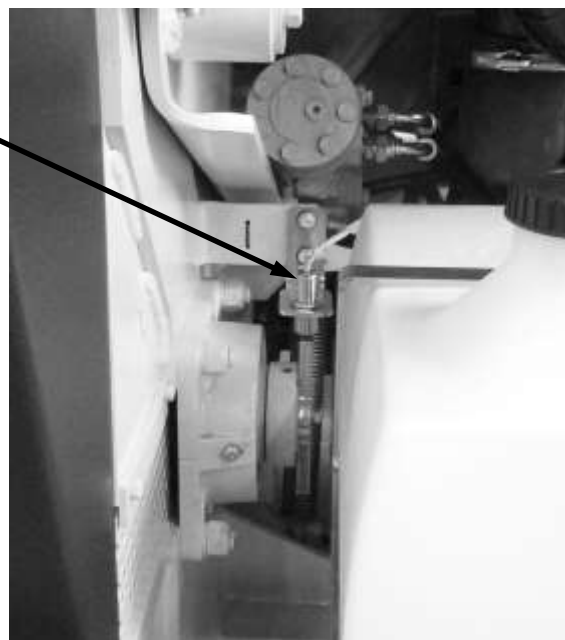

If the engine is stopped after 10 or 30 seconds, must determine the cause and do not try to start the engine repeatedly, otherwise the clutch overheats and the fuse (2) trips (see next page).


A flat fuse 12 V, 40A is located on the battery cable before the starter.



Flat fuse
type U, 40 A.




6 fuses of 4 different intensities for protecting the engine control are located in the junction box behind the starter switch. Attention: Replace defective fuses with fuses of the same amperage.

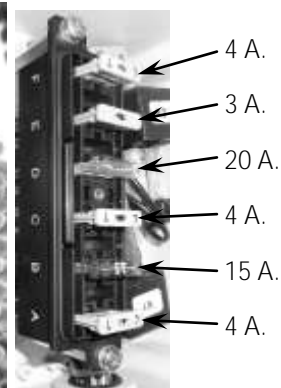

SAELEN TS INDUSTRIE®

Description and operation

HYDRAULIC COUPLING

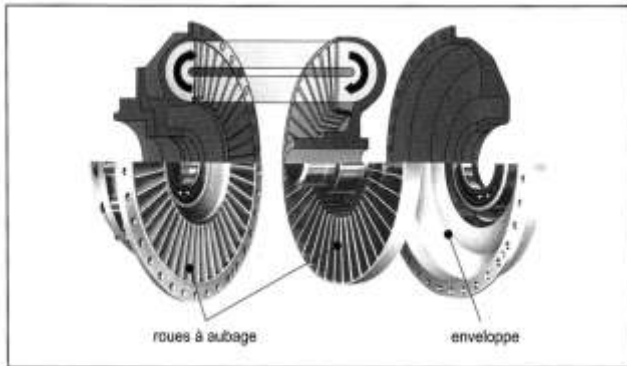


FUNCTIONING OF THE HYDRAULIC COUPLING

The Westcar coupling is a hydrodynamic coupling according to Föttinger's principle. It mainly consists of two paddle wheels (pump and turbine) and an external housing. The two paddle wheels are supported by bearings. The power is transmitted without hardly any wear because there is no mechanical contact between the elements. The coupling contains a constant quantity of liquid. The

mechanical energy of the drive engine is transformed into kinetic energy in the connected wheel pump. This kinetic energy is again transformed into mechanical energy in the turbine wheel.

THERMAL SAFETY 145° en 180°

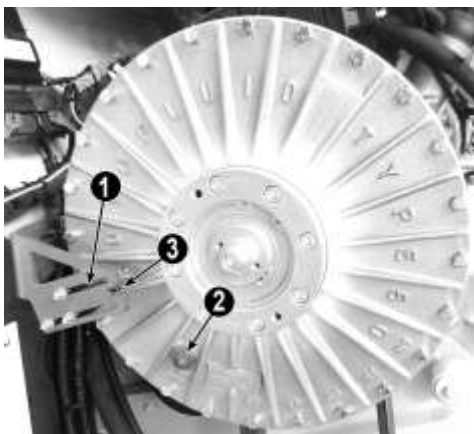


In case of abnormal overheating of the internal oil of the coupling (above 140°C), the thermal fuse (2) releases an axis that moves the handle (3) of the switch of the thermal safety (1). This switch interrupts the fuel supply which stops the engine. To restart, the thermal fuse (2) must be replaced and the handle (3) must return to its original position.



Should the rotor be jammed when starting the engine (e.g. because of a branch) and the contact switch does not work correctly, the oil can overheat and leak to the outside through the green safety fuse (melting point 180 °C). In order to prevent overheating, the rotor speed is continuously controlled by the slip control of the Pilot System.

Description and operation

Functioning of the CO2 REDUCTION system (option)

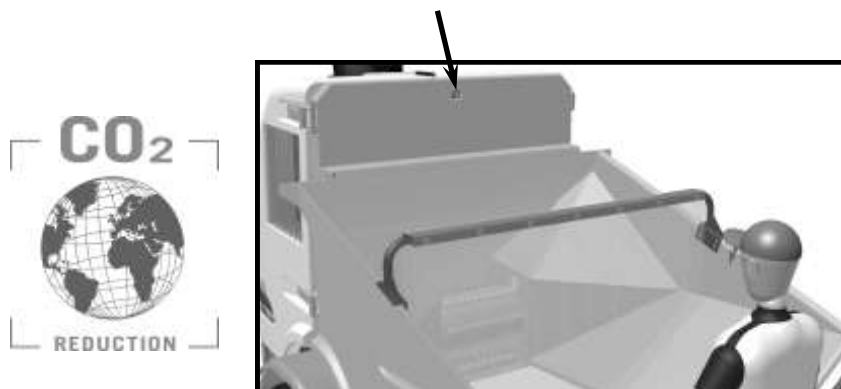

The grinder is a machine continuously running at an increased engine speed with alternating extreme and low load, depending on the conditions of application. This operating mode involves a high fuel consumption and noise level and high exhaust emissions.

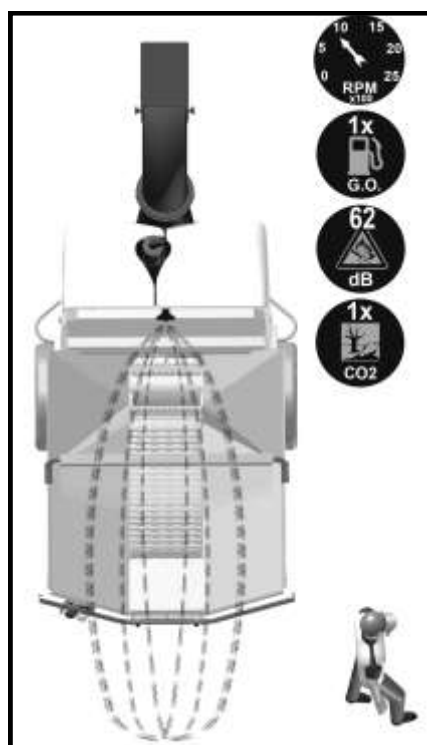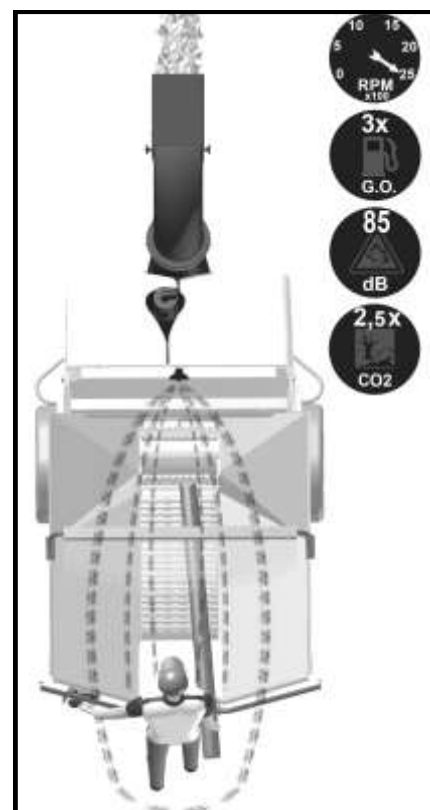

In order to exclude these disadvantages and to protect the environment, after a certain period of time in which the operator is away from the machine, the system switches the engine to idle running for reducing the CO2 output. As soon as the presence detector of the CO2 reduction has captured the operator, the engine goes back to working speed and rotor and conveyor belt are reconnected after 2 seconds. Furthermore, the CO2 reduction contributes to the extension of the duration of important components (diesel engine, propulsion, conveyor belt, feed rollers, motors and hydraulic circuits) of the machine.


See use on the following pages

SAELEN TS INDUSTRIE

Description and operation

The presence detector at the back of the housing detects the operator up to 2 m behind the hopper with a width of approximately 1,10 m. The hopper area is a dead zone that is not taken into consideration by the detector. Objects in this area will not accelerate the diesel engine or the rotation of the feed belt/roll.

All objects, even inert ones, e.g. a wall or a vehicle at less than 2 m behind the chipper will generate the automatic acceleration of the engine.

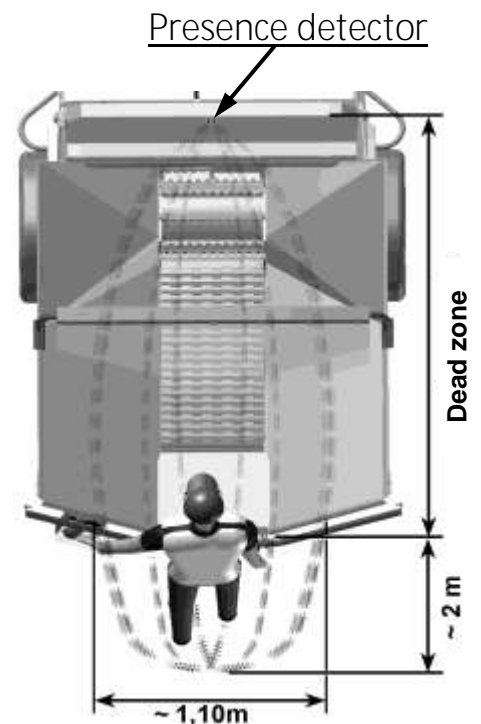


The system for CO2 reduction is not automatically connected (off). I.e. the engine does not automatically accelerate on the first start after the operator is captured by the presence detector.

Use of the machine with the CO2 reduction:

After starting the engine press 1x key ↓
(or 4x key ↑) to open the display CO2 reduction.

The system is switched off (off) and all 3 delay times are displayed with a light background.

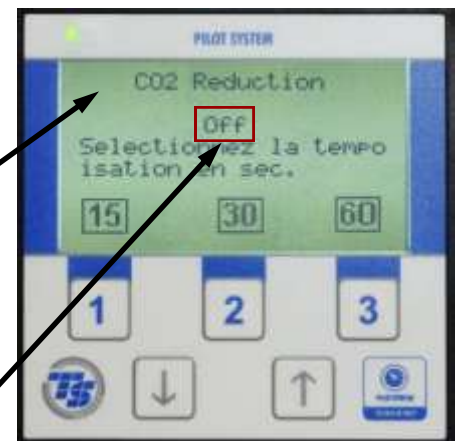


Note: The activation procedure is identical for all 3 delay times.

Activation of the 15 seconds delay time:

-Press key 1

-The delay time of 15 seconds is displayed with dark background.

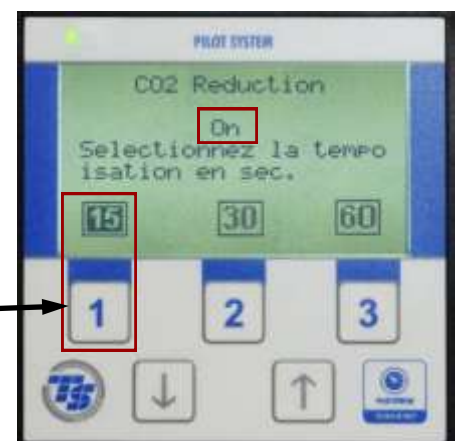

Continued on next page

Description and operation

- Press the key to switch to the main display.
- Select the desired mode of application 1, 2 or 3.
- Place yourself in the caption area behind the feed table.
- The engine accelerates up to working speed. Press the yellow key for starting rotor and conveyor belt.

The engine runs at maximum speed as long as the operator is within the caption area.

If the operator abandons the caption area, rotor and conveyor belt are switched off after 15 seconds.

The engine accelerates again and rotor / conveyor belt are reconnected as soon as the operator is captured by the presence detector.

The CO2 reduction and the selected delay time (15 sec.) remain active as long as they are not deactivated for switching the CO2 reduction off.

End of work:


If the operator leaves the caption area before and there is still material for milling on the feed table, rotor / conveyor belt continue to run and the engine remains at high speed until the entire material is milled, also after the delay time has elapsed.

Note: This system is not activated for small branches with a diameter of less than 10 to 15 mm.

Note: Use of the CO2 reduction is described on [page 22](#).

Causes for a failure of the capture range of the presence detector:


- Never change the height of the support for the dirt trap.
- Never change the angle of inclination of the support for the presence detector.
- Never let branches over the support for the dirt trap.
- Strong rain or wind.

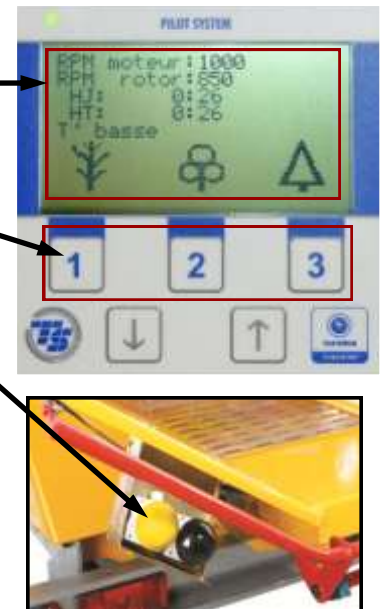

Description and operation

DISCHARGE

The top part of the discharge chute can be oriented 90° to the left and 90° to the right via the indexer

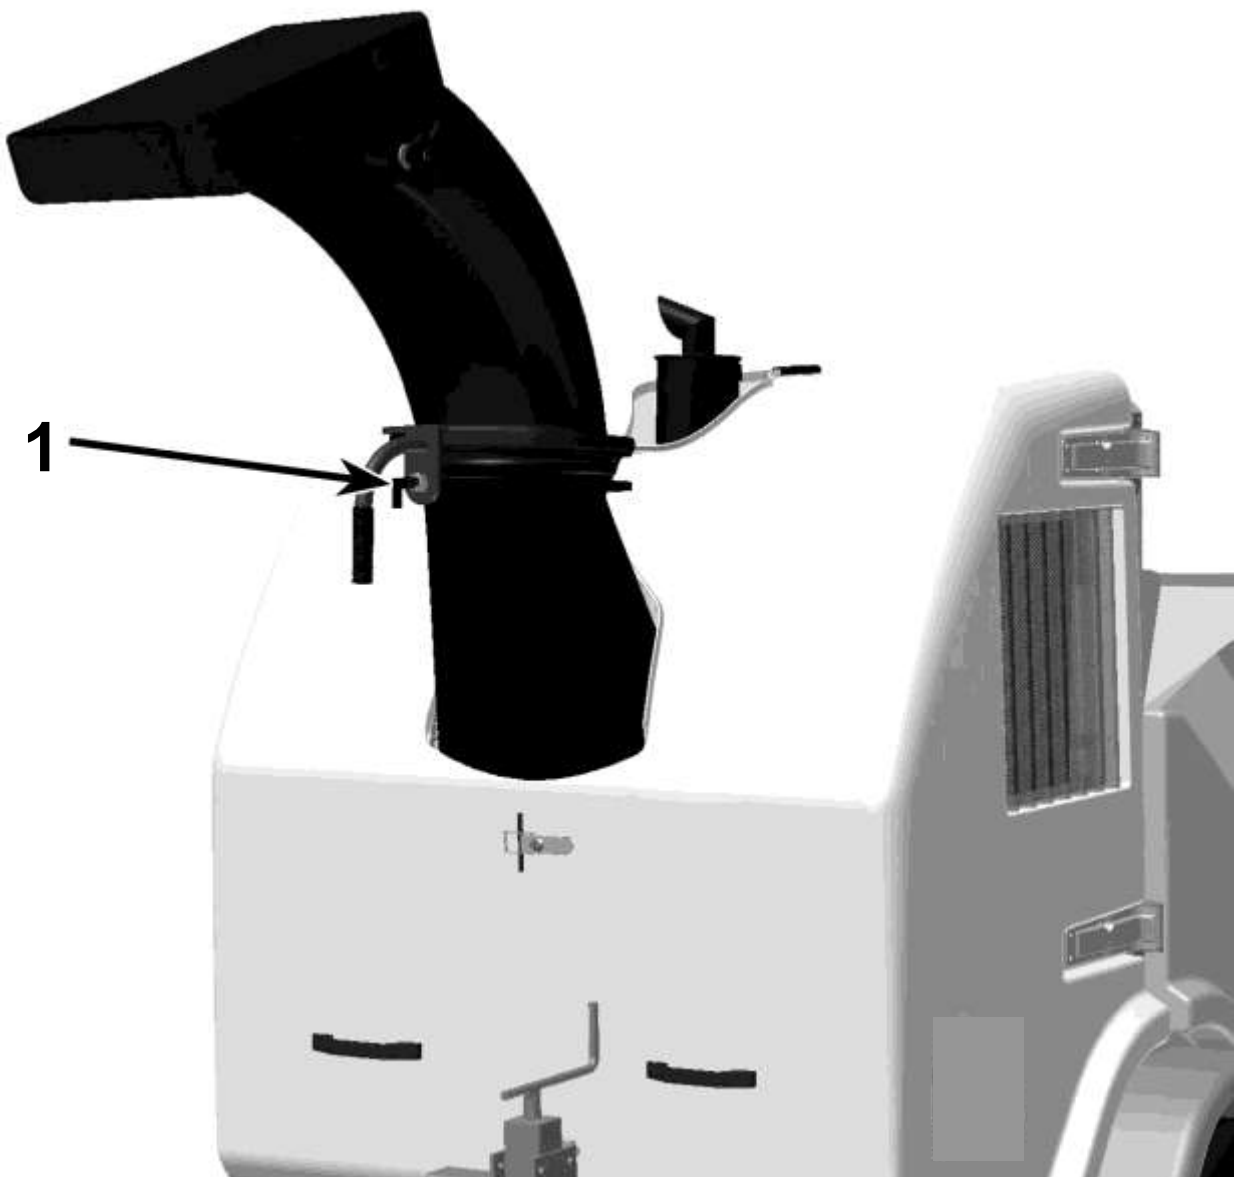

In this section, we provide a list of problems, their causes as well as possible Solutions. If you experience a problem that is not mentioned here, please contact your reseller. Keep your user manual and the serial number of your chipper at hand.

PROBLEM	CAUSE	SOLUTION
The engine is stopped and the Pilot System shows the following message: Slip error	- See page 45	
It is not possible to connect the Pilot System	<ul style="list-style-type: none"> - EMERGENCY STOP key activated - Clutch fuse has tripped 	<ul style="list-style-type: none"> - Deactivate - Check if the red pin of the fuse has come out, and turn the safety pin back into horizontal position (see page 55)
The engine will not start.	<ul style="list-style-type: none"> - Clutch fuse has tripped - EMERGENCY STOP key activated - Hood open - Wrong adjustment or defect of hood safety sensor - 40A fuse defective - Battery discharged - Supply cable defective 	<ul style="list-style-type: none"> - See p. 55 - deactivate the emergency - Check the covers closing - Control (see p.52) - Replace the fuse (see p.54) - Recharge or replace the battery - Check electrical circuits

PROBLEM - SOLVING

PROBLEM	CAUSE	SOLUTION
Reduced engine power	<ul style="list-style-type: none"> -Filter blocked -Blades and hammers blunt 	<ul style="list-style-type: none"> -Replace the filter -Grind or replace the blades. Replace the hammer inserts.
The engine stops early and will not start again	<ul style="list-style-type: none"> -The cover is not properly closed. -The safety of the coupling is activated. -The red light of the water temperature is on. -The safety sensor of the cover is defect. -There is no fuel left. 	<ul style="list-style-type: none"> -Check if the covers are closed properly. -See page 55 The radiator is dirty: clean -Check it (see p.52) -Add fuel
The belt/roll will not rotate forward or backward	<ul style="list-style-type: none"> -Speed wheel feeding equipment completely tightened -Hydraulic engine or pump defect -Not enough oil in the tank 	<ul style="list-style-type: none"> -Loosen the setting wheel on the distributor -Check or replace the defect part -Check the oil level
The machine has problems chipping	<ul style="list-style-type: none"> -Fouled radiator (see bottom page 22) -Knives/Counter-knife blunt -Coupling oil level too low -Belts defect or unsufficiently tightened 	<ul style="list-style-type: none"> -clean radiator -Sharpen or replace knives/inserts -Supplement the oil level -Replace and/or tighten the belts.
Feeding in forward operation is not regulated, not even below the Pilot System intervention threshold	<ul style="list-style-type: none"> -electrical or hydraulic problem 	<ul style="list-style-type: none"> -Please contact the seller

PROBLEM - SOLVING



CO2 REDUCTION (option)

PROBLEM	CAUSE	SOLUTION
The engine does not automatically accelerate	<ul style="list-style-type: none"> -The diesel engine is not warm enough, the green light is not on. -Poor alignment of the vision area of the radar -30 amp fuse melted -Radar interference -Radar problem 	<ul style="list-style-type: none"> -Wait until the temperature is higher and the green light is on (see page 48) -Check if the radar is horizontal. -Check the fuse, see p.49 -Check if there is no branch above the arch and/or if the lips are not put upwards above the holder -Switch off the engine and check at the back of the radar if the engine is warm and if, 10 seconds after making contact: <ul style="list-style-type: none"> * the 1st green light is on * the 2nd yellow light is on when a person is detected behind the hopper of the chipper <ul style="list-style-type: none"> * if the 2nd light is blinking red: contact the seller

Secifications


G S / C O B R A 7 5 D S	
Performance:	7,87 inches
Hourly output:	45 m3/h
Length:	4,50 m
Width:	2,00 m
Height:	2,50 m
Weight:	2141 Kg
Number of inserts:	20
Number of knives:	4
Rotor diameter:	560 mm
Rotor weight:	200 Kg
Rotor width:	500 mm
Engine power:	75 Cv Kohler 4 cylinders
Fuel tank capacity:	47 L
Engine speed:	2600 Tr/mn
Rotor speed:	2200 Tr/mn
Overload protection:	OUI
Hydraulic supply:	OUI
Hydraulic oil tank capacity:	24L
Hydraulic pressure:	120 bars
Test drive:	OUI
Noise protection:	OUI
Number of wheels:	2
Tyres:	215R14
Tyre pressure:	4.5 bars
CO2 REDUCTION:	Option

Hydraulic connections

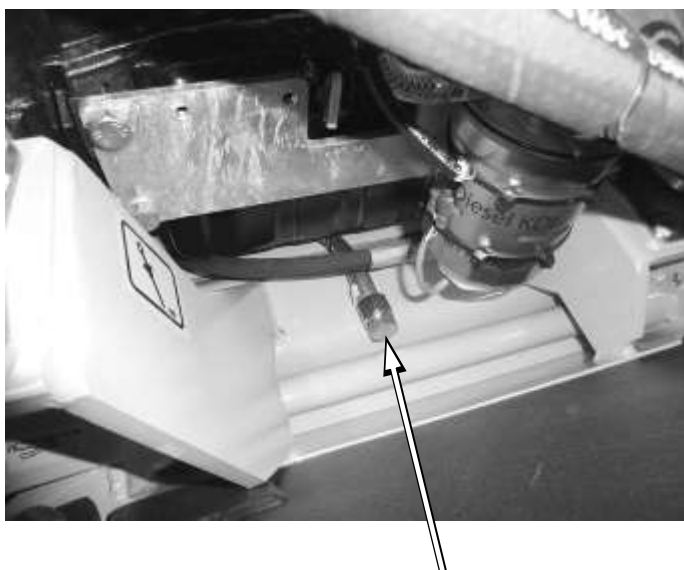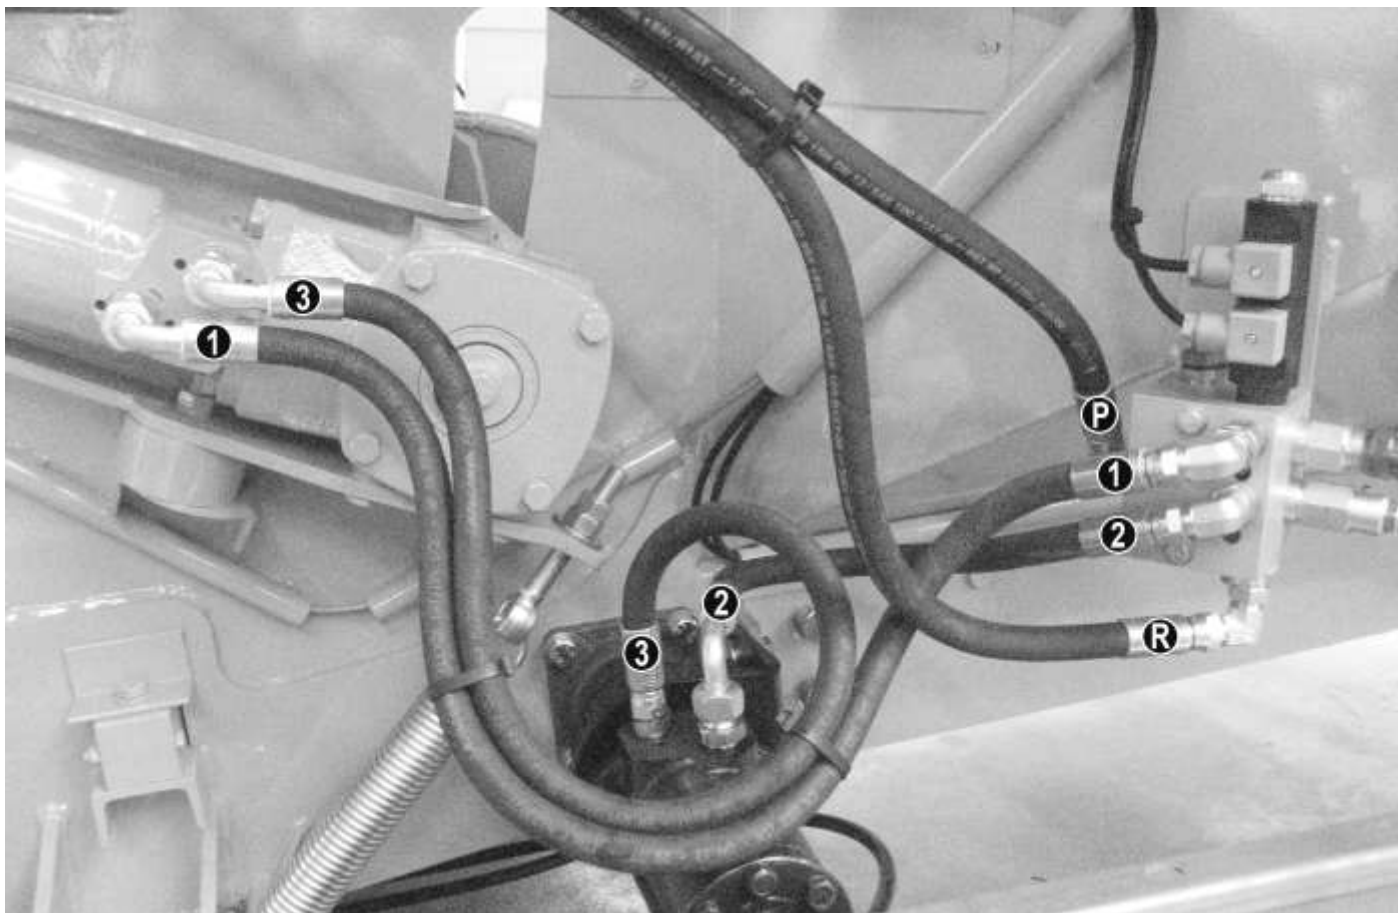


ENGINE OIL CHANGE HOSE

(do the oil change hot)

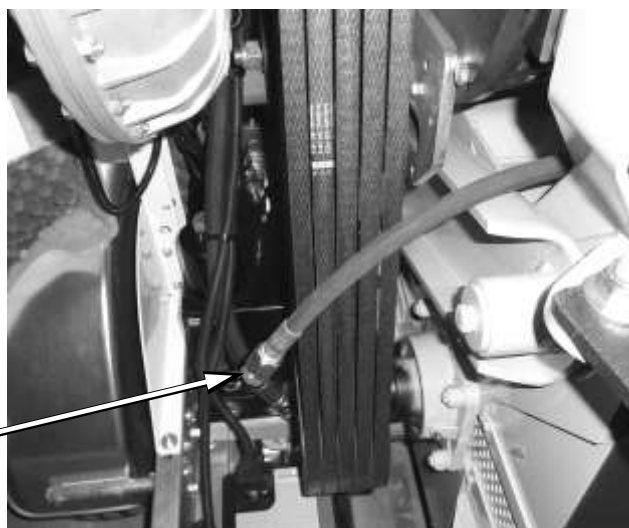


Hydraulic Circuit Diagram

COBRA 75

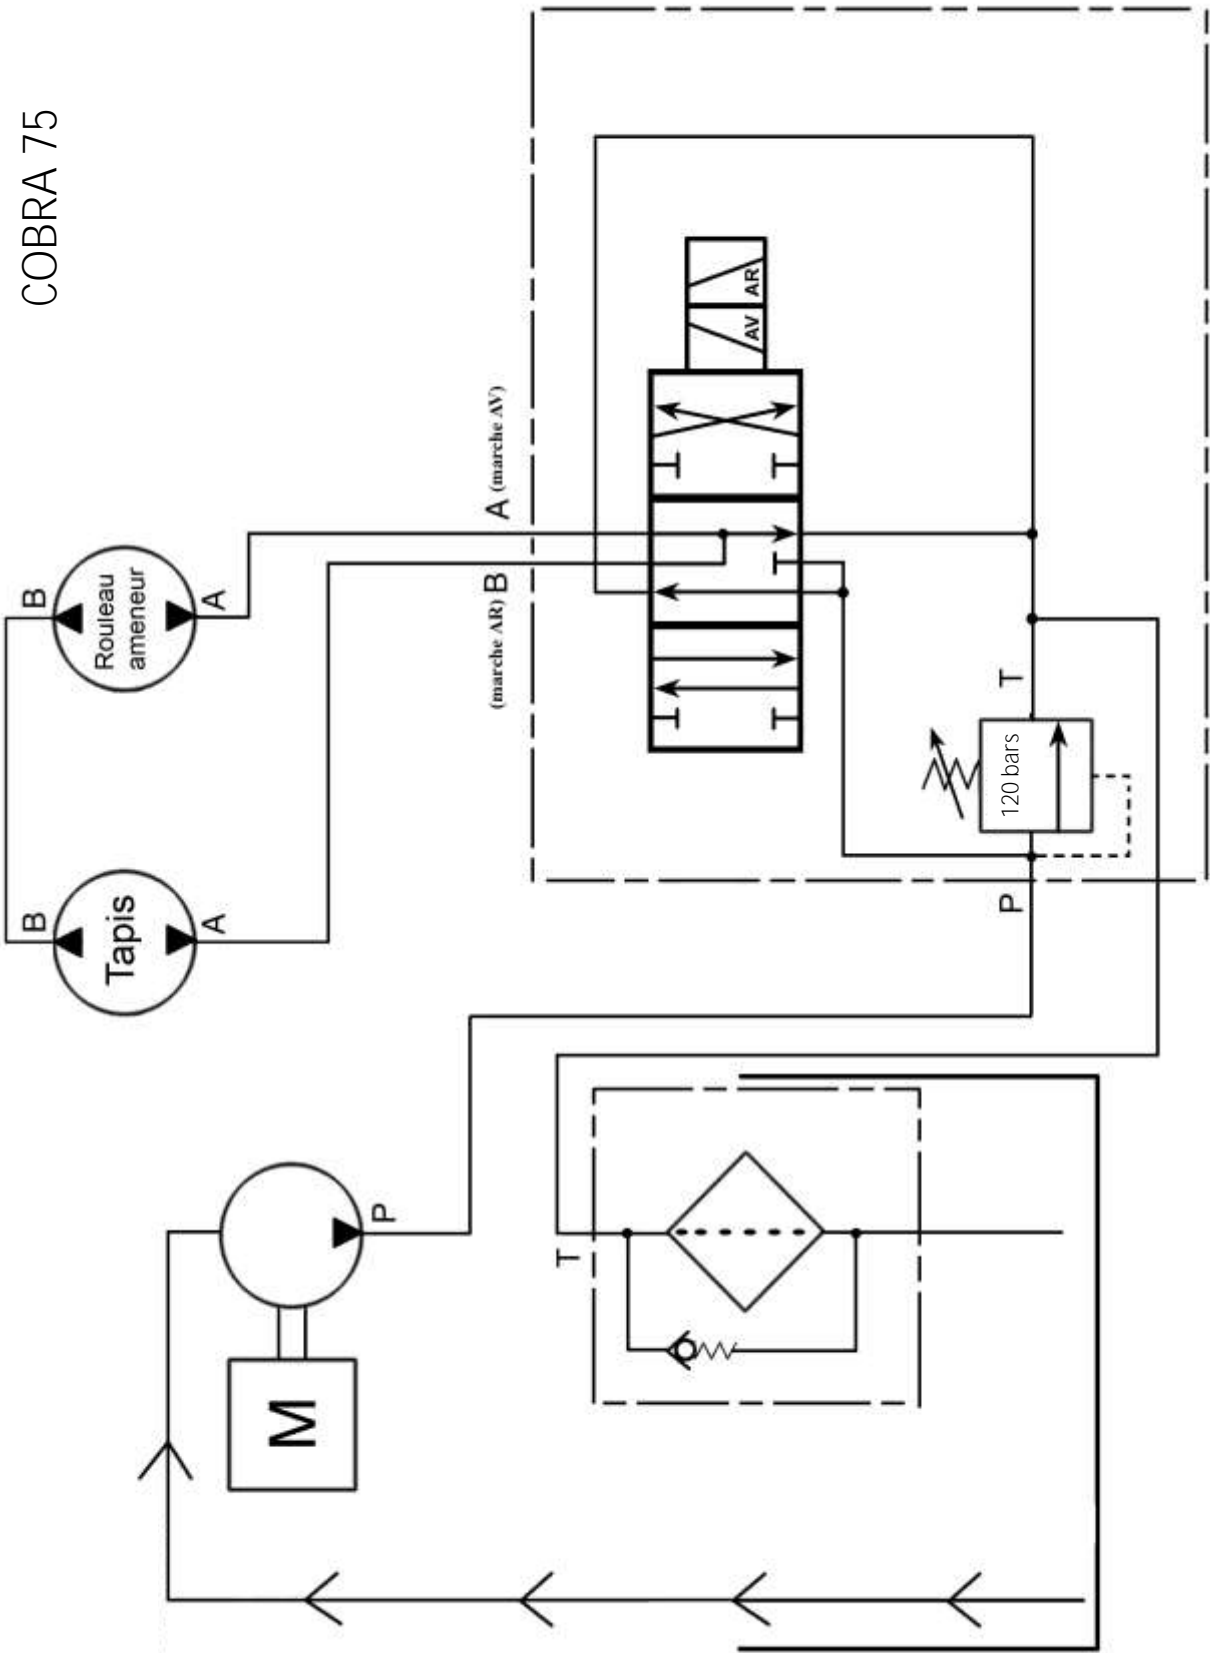


Electric Circuit Diagram Engine 1/3

Für diese Unterlage behalten wir uns alle Rechte vor, auch für den Fall der Patentierung oder Gebrauchsmusteranmeldung. Sie darf ohne unsere vorherige schriftliche Zustimmung weder vervielfältigt noch sonstwie benutzt, noch Dritten zugänglich gemacht werden.

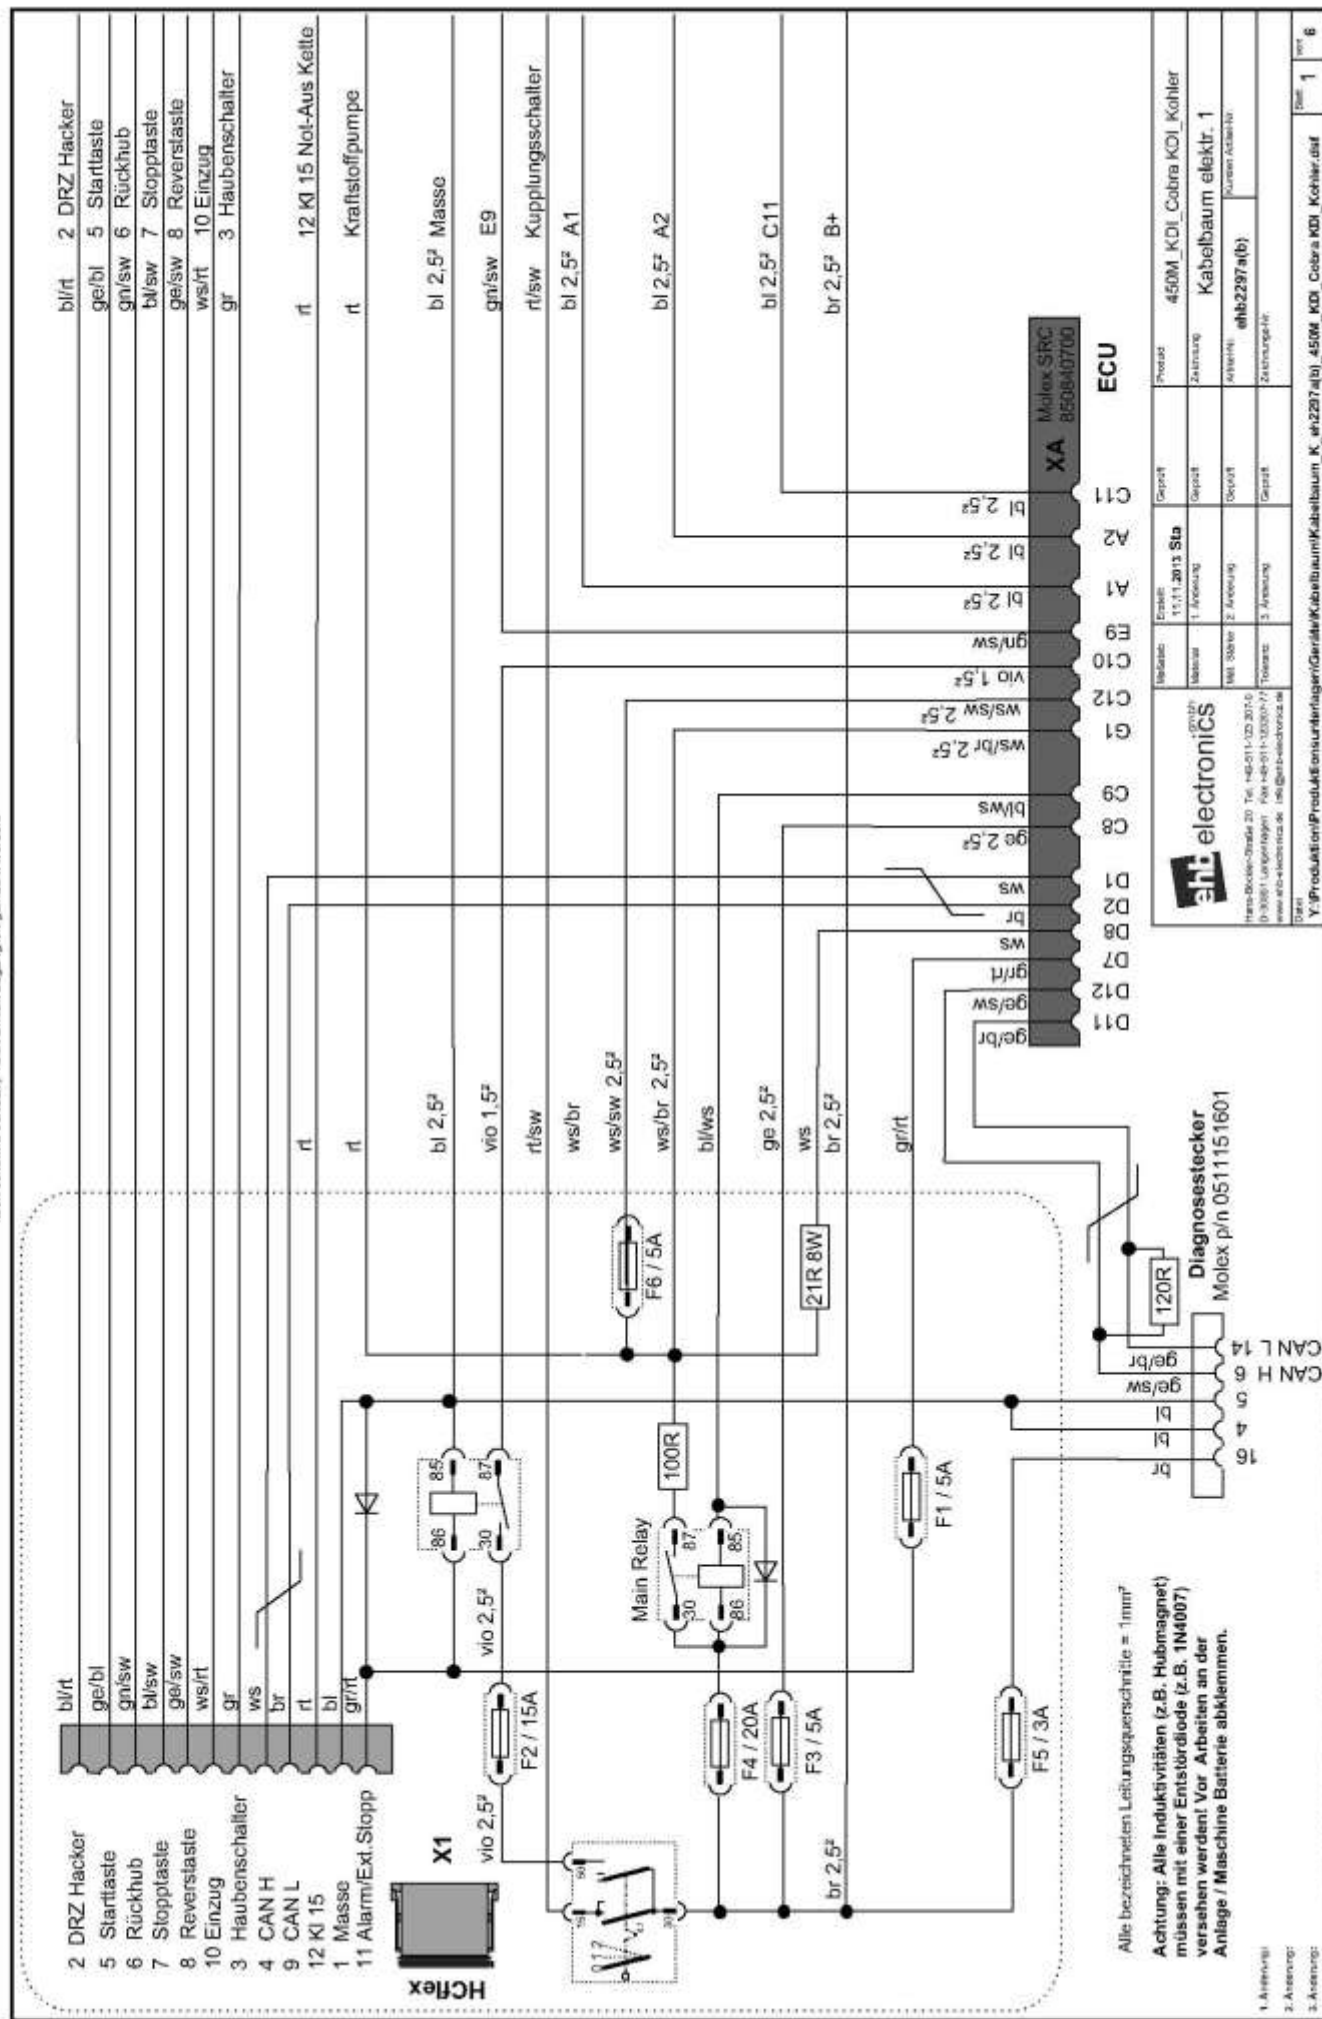


Alle bezeichneten Leitungsquerschnitte = 1mm²
Achtung: Alle Induktivitäten (z.B. Hubmagnet) müssen mit einer Entstörkondensator (z.B. 1N4007) versehen werden! Vor Arbeiten an der Anlage / Maschine Batterie abklemmen.

1. Änderung
 2. Änderung
 3. Änderung

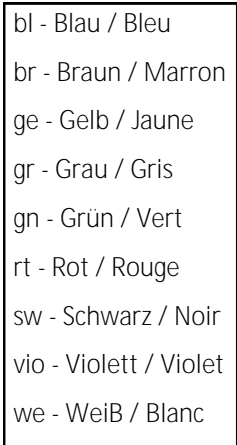


br - Braun / Marron
ge - Gelb / Jaune
gr - Grau / Gris
gn - Grün / Vert
rt - Rot / Rouge
sw - Schwarz / Noir
vio - Violett / Violet
we - Weiß / Blanc

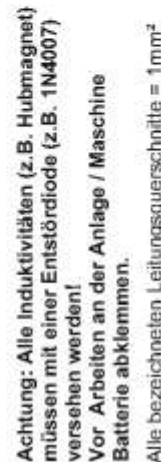[illegible]

Electric Circuit Diagram machine 2/2

Für diese Unterlage behalten wir uns alle Rechte vor, auch für den Fall der Patentfalschung oder Gebrauchsmusterverletzung. Sie darf ohne unsere vorherige schriftliche Zustimmung weder ververvielfältigt noch sonderlich benutzt, noch Dritten zugänglich gemacht werden.

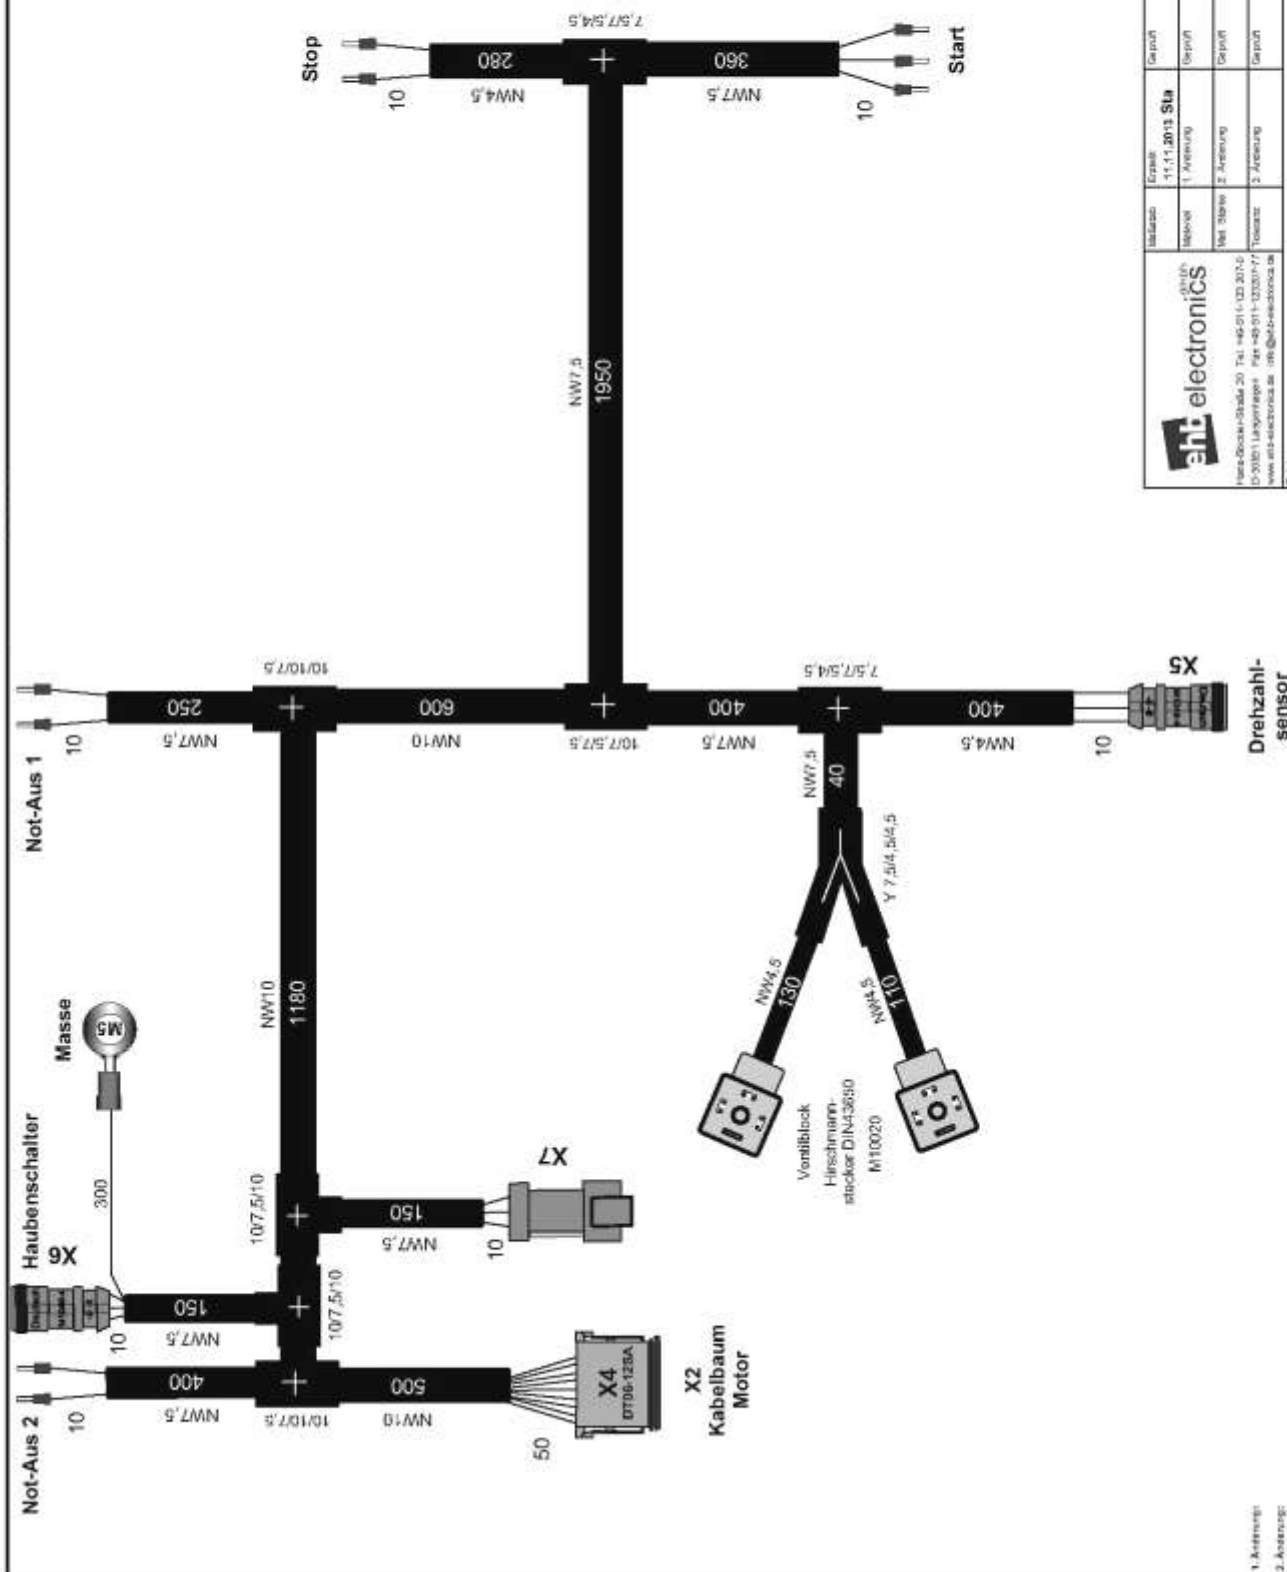

	Produkt	Cablage machine VIPER et COBRA	
	Geprüft	Geprüft	Geprüft
	Erstellt	11.11.2013	Sta
	Revisiert	1. Änderung	
Hirschmann-Stecker 20 Pin M10020 (1-10) 2013 (DIN43650) Längenangabe: 170mm Hirschmann-Stecker 20 Pin M10020 (1-10) 2013 (DIN43650) Längenangabe: 170mm	Geprüft	Geprüft	Geprüft
	Erstellt	11.11.2013	Sta
	Revisiert	1. Änderung	
	Geprüft	Geprüft	Geprüft
Y-Produktion/Produktionsunterlagen/Geräte/Kabelbaum/Kabelbaum_ehb2294a (b).hbskier_TS			
Blatt			2
von			2

Saelen

3 rue Jules Verne
L'Orée du Golf - BP 17
59790 Ronchin
Tél : + 33 (0)3 20 43 87 87
Fax : +33 (0)3 20 34 12 73
contact@saelen.fr www.salen.Fr

Pièces détachées

Tél : + 33 (0)3 20 43 24 89
Fax : +33 (0)3 20 34 12 73

TS Industrie

TS Industrie GmbH
Weserstr. 2
D - 47506 Neukirchen - Vluyn (Germany)
Tel.: +49 2845 / 9292-0
Fax: +49 2845 / 9292-28
kontakt@ts-industrie.de
